

BR 700

Spare Parts List


02/08/2023

Indonesia, English

Contents

Engine	2	Ignition system tester, ZAT 3	65
Engine	5	Ignition system tester, ZAT 4	67
Muffler, Ignition system	9	Compression tester	69
Air filter, Manifold	11	Setting gauge	71
Air filter, Manifold	13	Locking screw	73
Rewind starter	15	Sleeve	75
Carburetor 4282/13	17	Installing tool, 12	77
Carburetor 4282/11	20	Torque wrench with optical/acoustic signal	79
Fan housing, Shroud	23	Torque wrench	81
Fuel tank, Backplate	25	Torque wrench with optical/acoustic signal	83
Pleated hose, Blower tube BR 700	27	Torque wrench	85
Control handle	29	Jaw (profile No. 3.1 and 4)	87
Bike handle	31	Sleeve	89
Tools, Extras	33	Puller	91
Serial number	35	Puller	93
Smart Connector	37	Screwdriver	95
Miscellaneous lubricants and greases	39	Nipple	97
Cleaning products	41	Testing tool kit	99
Nipple	43	Pump	101
Assembly drift	45	Leakage tester kit	103
Press sleeve	47	Screwdriver, T27x200	105
Installing sleeve	49		
Sealing plate	51		
Hose 135 mm / 5 5/16"	53		
Test flange	55		
Setting gauge	57		
Socket, 13 mm	59		
Socket, 17 mm	61		
Assembly hook	63		

Engine

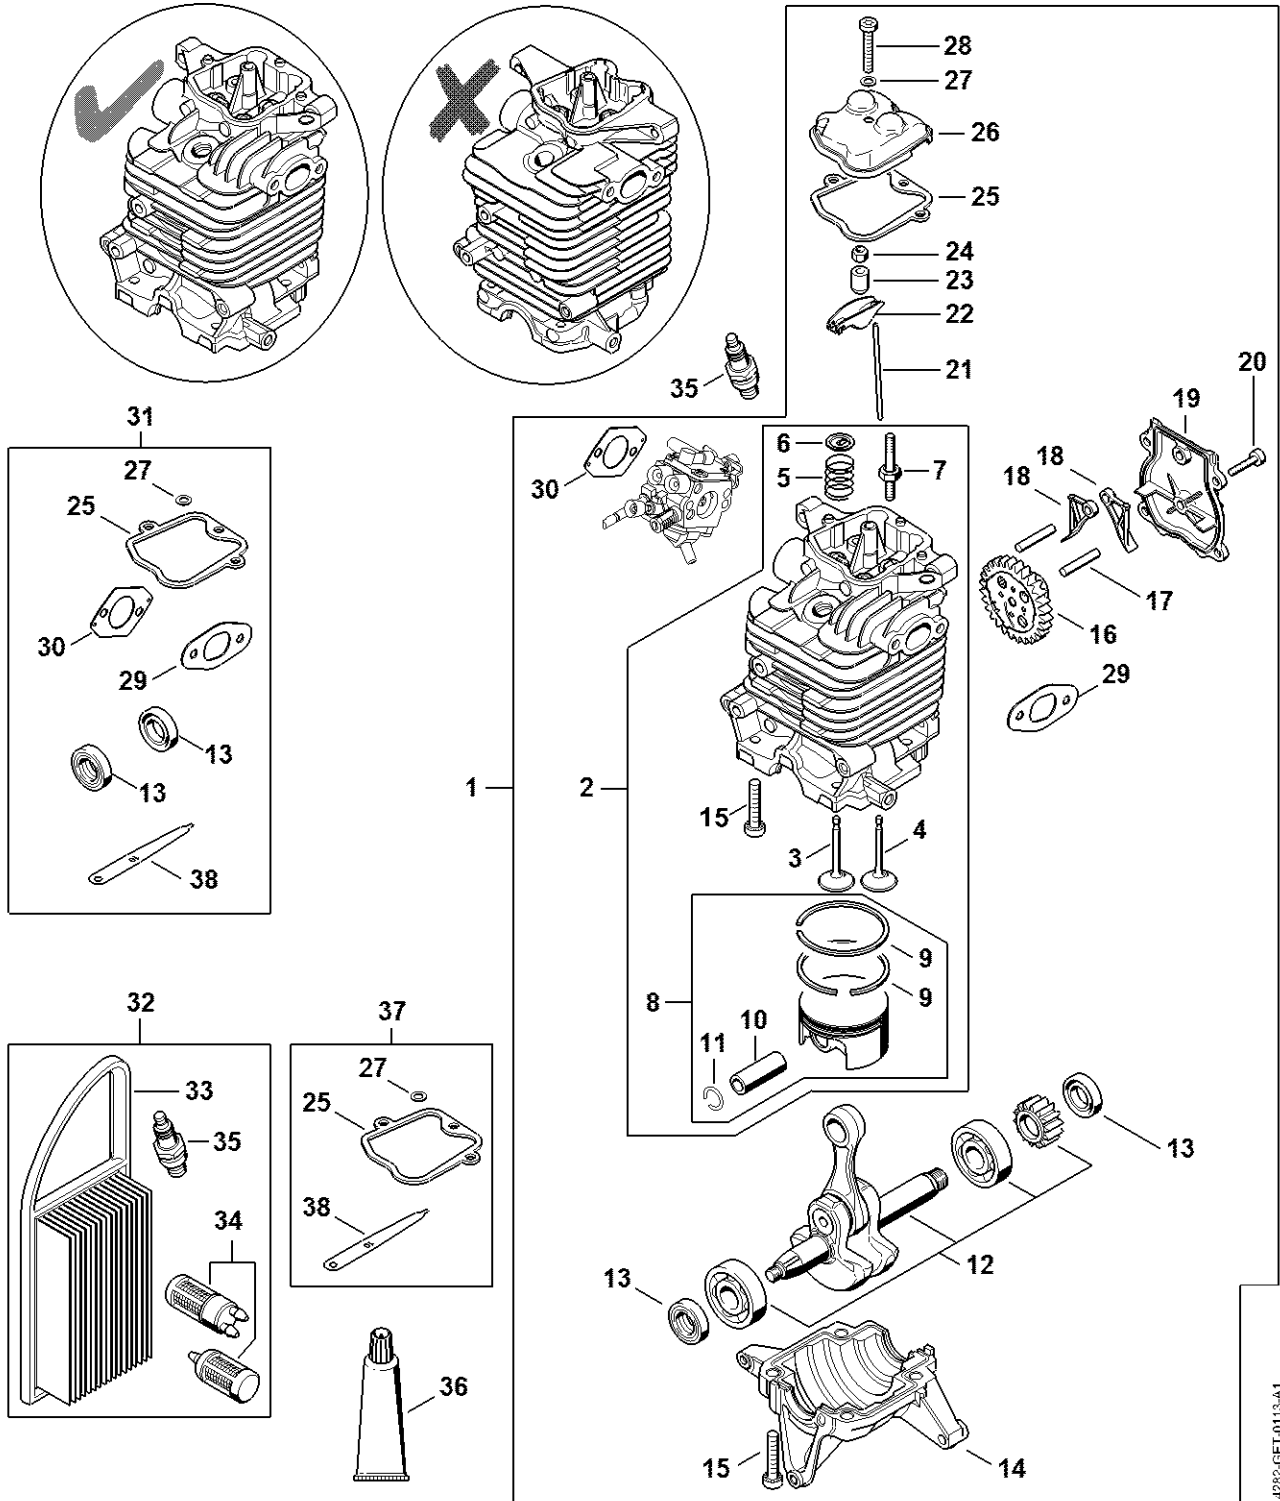

4282-GET-013-A1


Engine

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 020 0201	Engine	1	2 - 30	
2	4282 020 1201	Cylinder with piston Ø 50 mm	1	3 - 11, 15	
3	4282 025 1801	Inlet valve	1		
4	4282 025 1903	Exhaust valve	1		
5	4282 025 1600	Valve spring	2		
6	4180 025 3000	Spring retainer plate	2		
7	4180 038 1700	Collar screw M5	2		
8	4282 030 2003	Piston Ø 50 mm	1	9 - 11	
9	4283 034 3006	Piston ring Ø 50x1,2 mm	2		
10	4282 034 1501	Piston pin 12x7x33	1		
11	9463 650 1200	Snap ring 12x1	2		
12	4282 030 0411	Crankshaft	1		
13	9639 003 1585	Oil seal 15x25x5	2		
14	4282 021 2503	Engine pan	1		
15	9022 341 1370	Spline screw IS-M6x30	4		
16	4282 030 1801	Cam wheel	1		
17	4180 038 0801	Pin 5x28	2		
18	4282 038 1900	Cam follower	2		
19	4282 038 1300	Cover	1		
20	9075 478 3016	Pan head self-tapping screw IS-D4x16	4		
21	4282 038 2600	Pushrod	2		
22	4282 038 1000	Rocker arm	2		
23	4180 038 2000	Sleeve	2		
24	4180 038 2700	Lock nut M5	2		
25	4282 029 0501	Gasket	1		
26	4282 025 1101	Valve cover	1		
27	9636 815 0270	Sealing ring 5x9x1	1		

Engine

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
28	9022 346 1070	Spline screw IS-M5x30	1		
29	4282 149 0600	Muffler gasket	1		
30	4283 129 0900	Gasket	1		
31	4282 007 1600	Set of gaskets	1	13, 25, 27, 29, 30, 34	
32	4282 007 4100	Servicing kit 39	1	33 - 35	
33	4282 141 0300	Air filter	1		
34	4282 007 3600	Set of pickup bodies	1		
35	0000 400 7011	Spark plug NGK CMR6H	1		
36	0783 830 2000	Tube of sealant HT red	1		
37	4282 007 1029	Valve clearance setting kit	1	25, 27, 38	
38	4180 893 6400	Setting gauge	1		

Engine

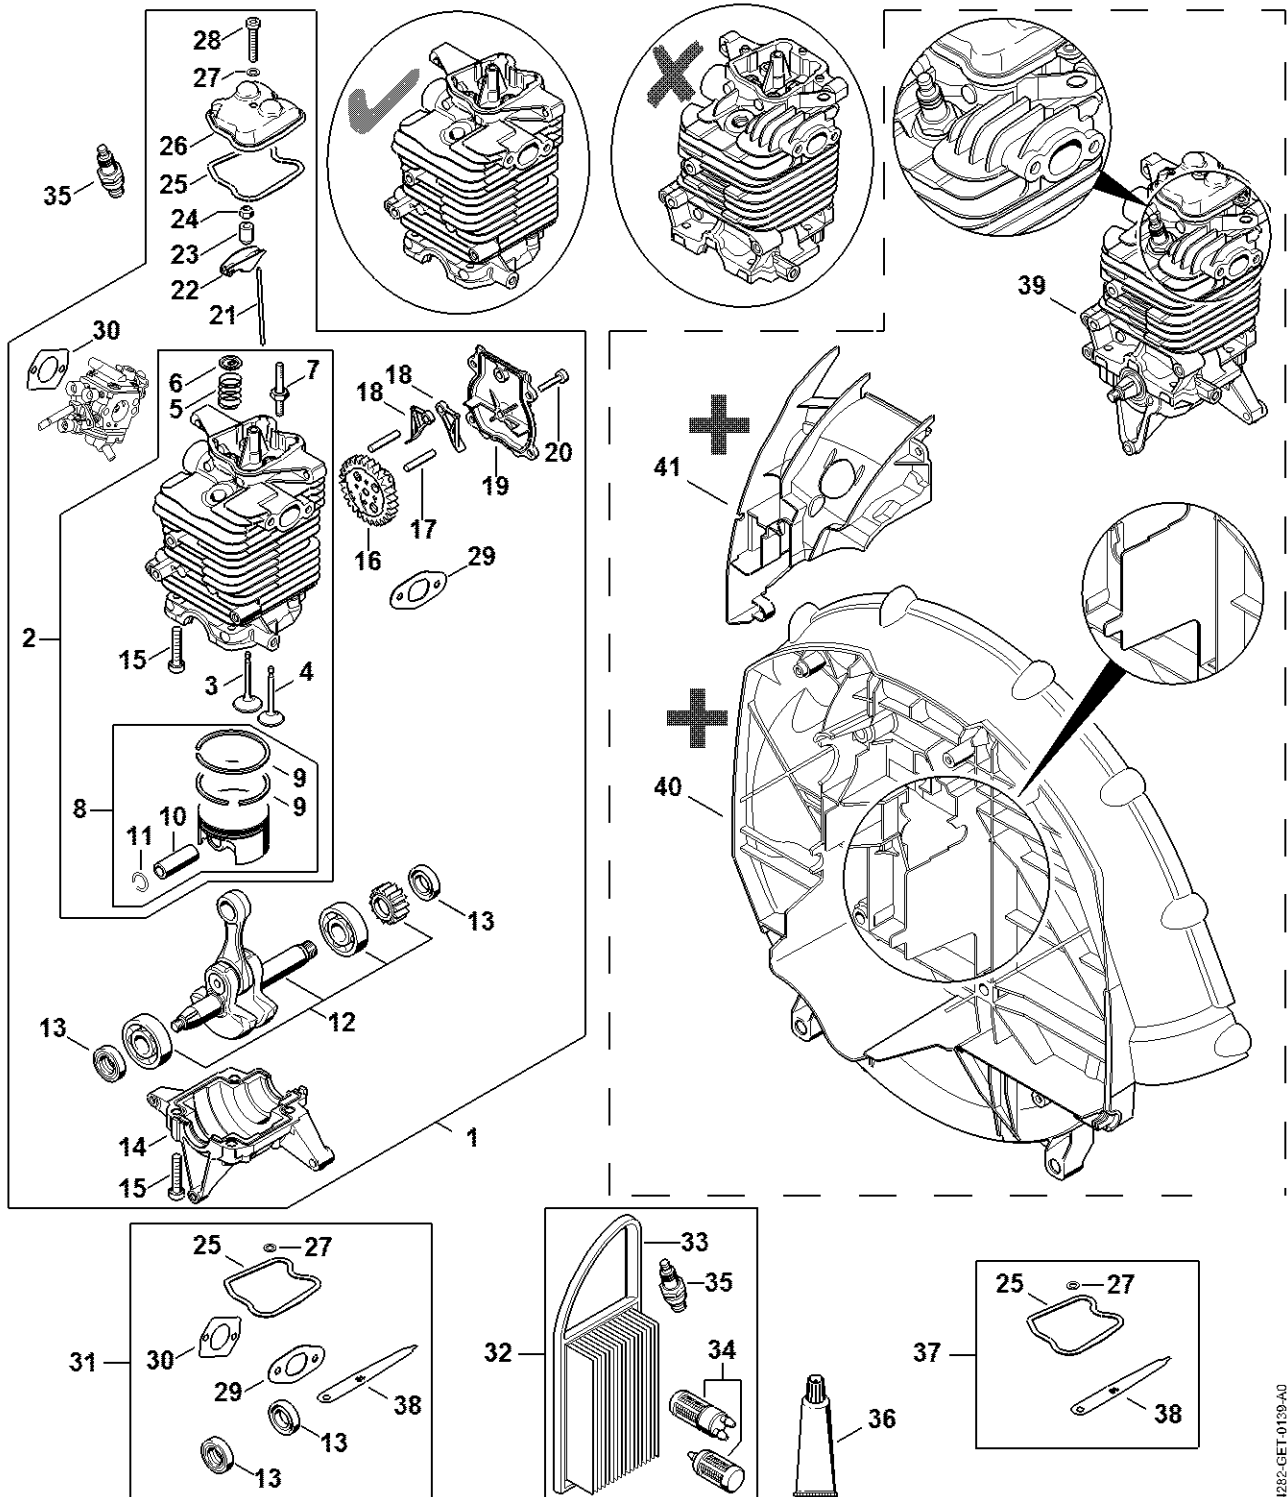

4285-GET-0139-A0

Engine

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 020 0200	Engine	1	2 - 30	
2	4282 020 1200	Cylinder with piston Ø 50 mm	1	3 - 11, 15	
3	4282 025 1801	Inlet valve	1		
4	4282 025 1903	Exhaust valve	1		
5	4282 025 1600	Valve spring	2		
6	4180 025 3000	Spring retainer plate	2		
7	4180 038 1700	Collar screw M5	2		
8	4282 030 2003	Piston Ø 50 mm	1	9 - 11	
9	4283 034 3006	Piston ring Ø 50x1,2 mm	2		
10	4282 034 1501	Piston pin 12x7x33	1		
11	9463 650 1200	Snap ring 12x1	2		
12	4282 030 0404	Crankshaft	1		
13	9639 003 1585	Oil seal 15x25x5	2		
14	4282 021 2502	Engine pan	1		
15	9022 341 1370	Spline screw IS-M6x30	4		
16	4282 030 1801	Cam wheel	1		
17	4180 038 0801	Pin 5x28	2		
18	4282 038 1900	Cam follower	2		
19	4282 038 1300	Cover	1		
20	9075 478 3016	Pan head self-tapping screw IS-D4x16	4		
21	4282 038 2600	Pushrod	2		
22	4282 038 1000	Rocker arm	2		
23	4180 038 2000	Sleeve	2		
24	4180 038 2700	Lock nut M5	2		
25	4282 029 0500	Gasket	1		
26	4282 025 1101	Valve cover	1		
27	9636 815 0270	Sealing ring 5x9x1	1		


Engine

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
28	9022 346 1070	Spline screw IS-M5x30	1		
29	4282 149 0600	Muffler gasket	1		
30	4283 129 0900	Gasket	1		
31	4282 007 1010	Set of gaskets	1	13, 25, 27, 29, 35	
32	4282 007 4100	Servicing kit 39	1	33 - 35	
33	4282 141 0300	Air filter	1		
34	4282 007 3600	Set of pickup bodies	1		
35	0000 400 7011	Spark plug NGK CMR6H	1		
36	0783 830 2000	Tube of sealant HT red	1		
37	4282 007 1001	Valve clearance setting kit	1	25, 27, 35	
38	4180 893 6400	Setting gauge	1		
39	4282 020 0201	Engine	1		In older versions engine 4282 020 0200 can be replaced by the new more robust engine with new air guide shroud and fan housing
40	4282 700 4107	Fan housing	1		In older versions engine 4282 020 0200 can be replaced by the new more robust engine with new air guide shroud and fan housing
41	4282 087 3002	Air guide shroud	1		In older versions engine 4282 020 0200 can be replaced by the new more robust engine with new air

Engine

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
					guide shroud and fan housing

Muffler, Ignition system

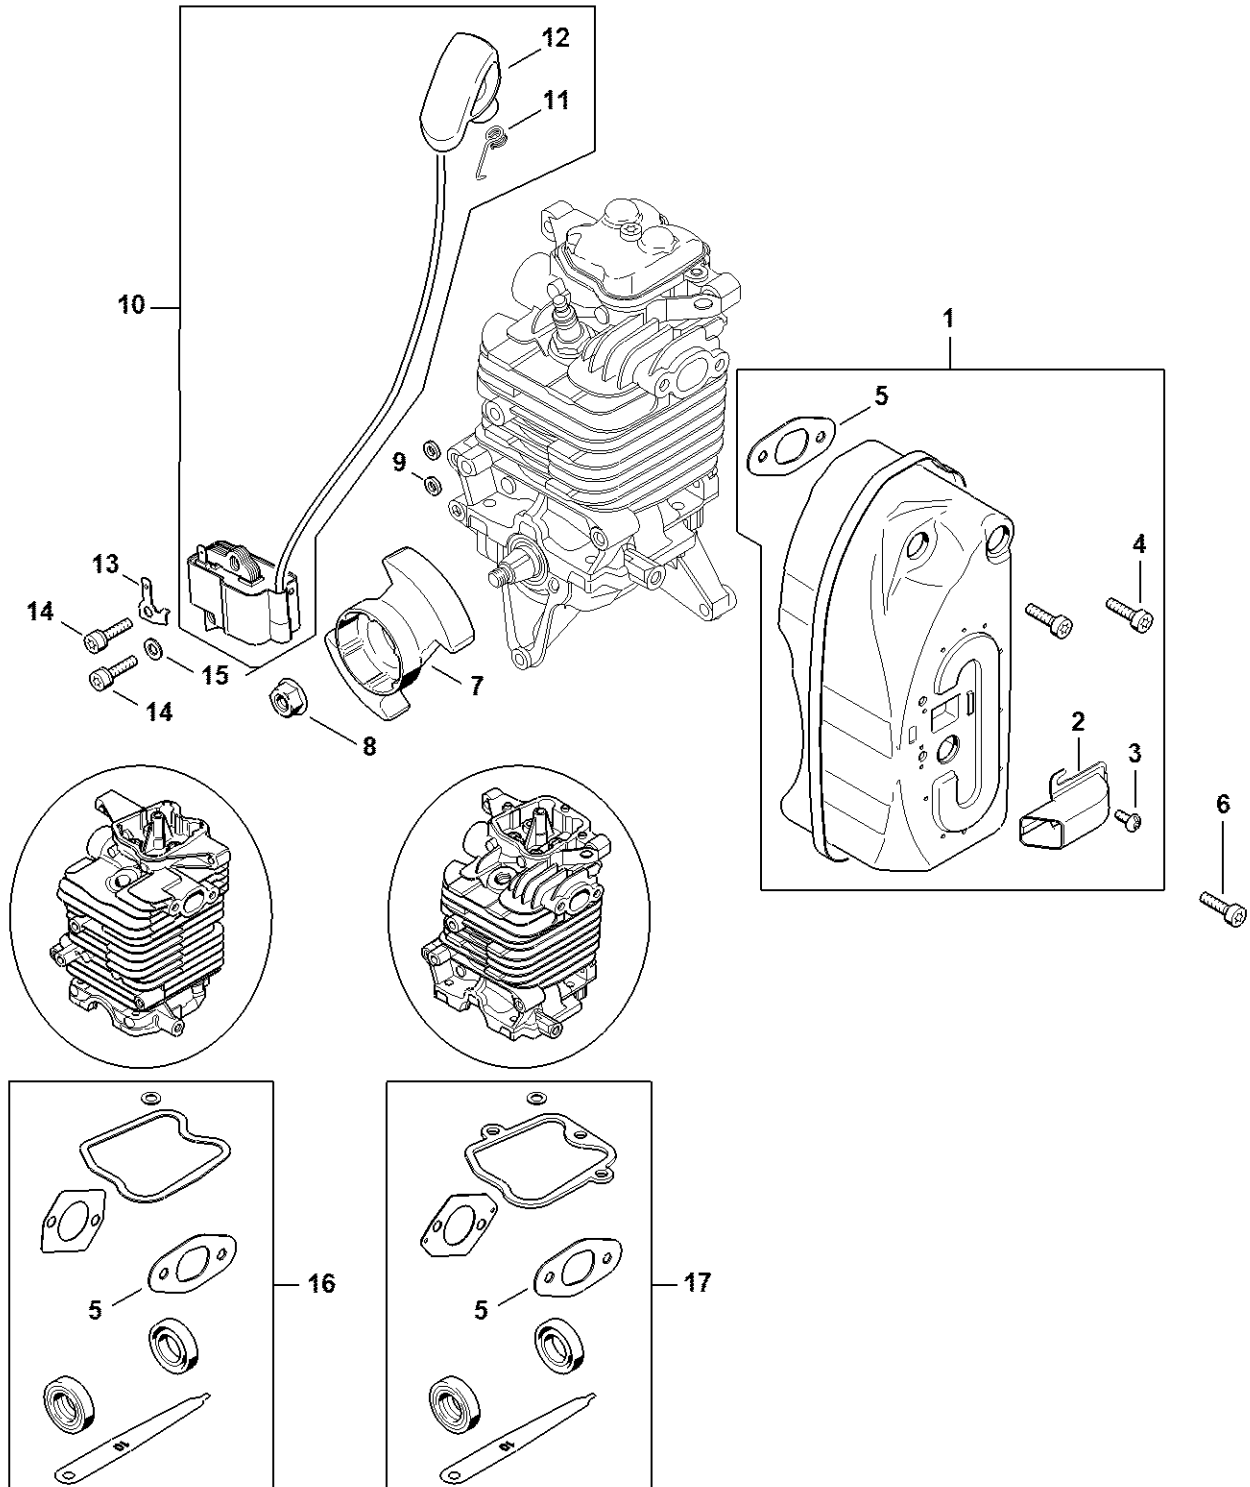


4282-GET-0140-A0

Muffler, Ignition system

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 140 0603	Muffler	1	2 - 5	
2	4282 145 8100	Exhaust deflector	1		
3	9039 448 0656	Self-tapping screw M4x9.6	2		
4	9022 341 1010	Spline screw IS-M5x18	2		
5	4282 149 0600	Muffler gasket	1		
6	9022 341 1010	Spline screw IS-M5x18	1		
7	4282 400 1200	Flywheel	1		
8	0000 955 0802	Collar nut M8x1	1		
9	4282 404 9300	Washer	2		
10	4282 400 1308	Ignition module.	1	11, 12	
11	0000 998 0604	Spark plug contact spring	1		
12	4180 405 1000	Spark plug boot	1		
13	4282 431 2101	Connector tag 6,3 mm	1		
14	9075 478 4136	Pan head self-tapping screw IS-D5x20	2		
15	9291 021 0120	Washer 5.3	1		
16	4282 007 1010	Set of gaskets	1	5	
17	4282 007 1600	Set of gaskets	1	5	

Air filter, Manifold

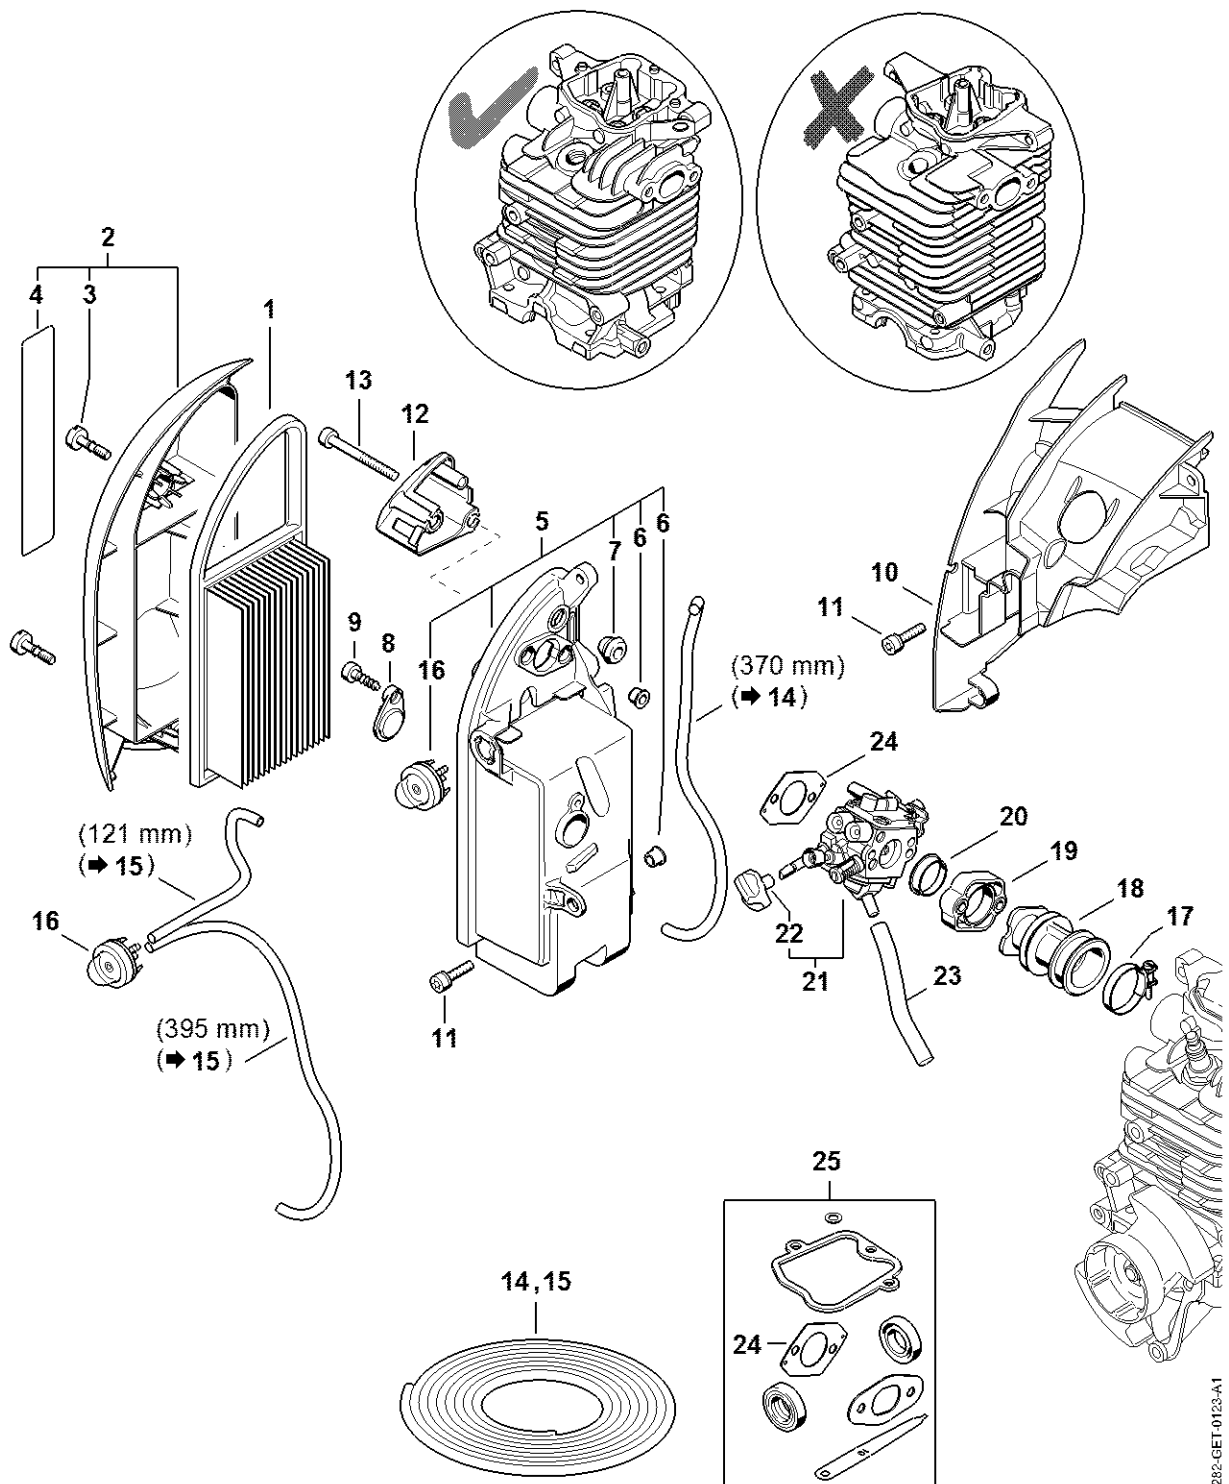


4282-GET-0123-A1

Air filter, Manifold

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 141 0300	Air filter	1		
2	4282 140 1003	Filter cover	1	3, 4	
3	9022 319 1027	Screw IS-M5x21	1		
4	0000 967 7335	Warning pictogram BR	1		
5	4282 140 2851	Filter housing	1	6, 7, 16	
6	0000 963 0809	Bushing	3		
7	4134 123 7500	Grommet	1		
8	4282 141 2900	Cover	1		
9	9074 477 4132	Pan head self-tapping screw IS-P5x18	1		
10	4282 087 3002	Air guide shroud	1		
11	9075 478 4159	Pan head self-tapping screw IS-D5x24	2		
12	4282 121 6900	Baffle	1		
13	9022 341 1220	Spline screw IS-M5x48	2		
14	0000 937 5004	Hose 3.1x5.7 mm x 1 m, R5	1		
15	0000 930 2802	Hose 2.2x5.4 mm x 1 m, R1	1		
16	0000 350 6202	Fuel pump	1		
17	9771 021 2536	Hose clip 30x5	1		
18	4282 141 2200	Manifold	1		
19	4282 120 2200	Flange	1		
20	1113 141 1805	Sleeve	1		
21	4282 120 0613	Carburetor 4282/13	1	22	
22	Z010 042 Z008	Choke lever	1		
23	4282 141 8600	Impulse hose	1		
24	4283 129 0900	Gasket	1		
25	4282 007 1600	Set of gaskets	1	24	

Air filter, Manifold

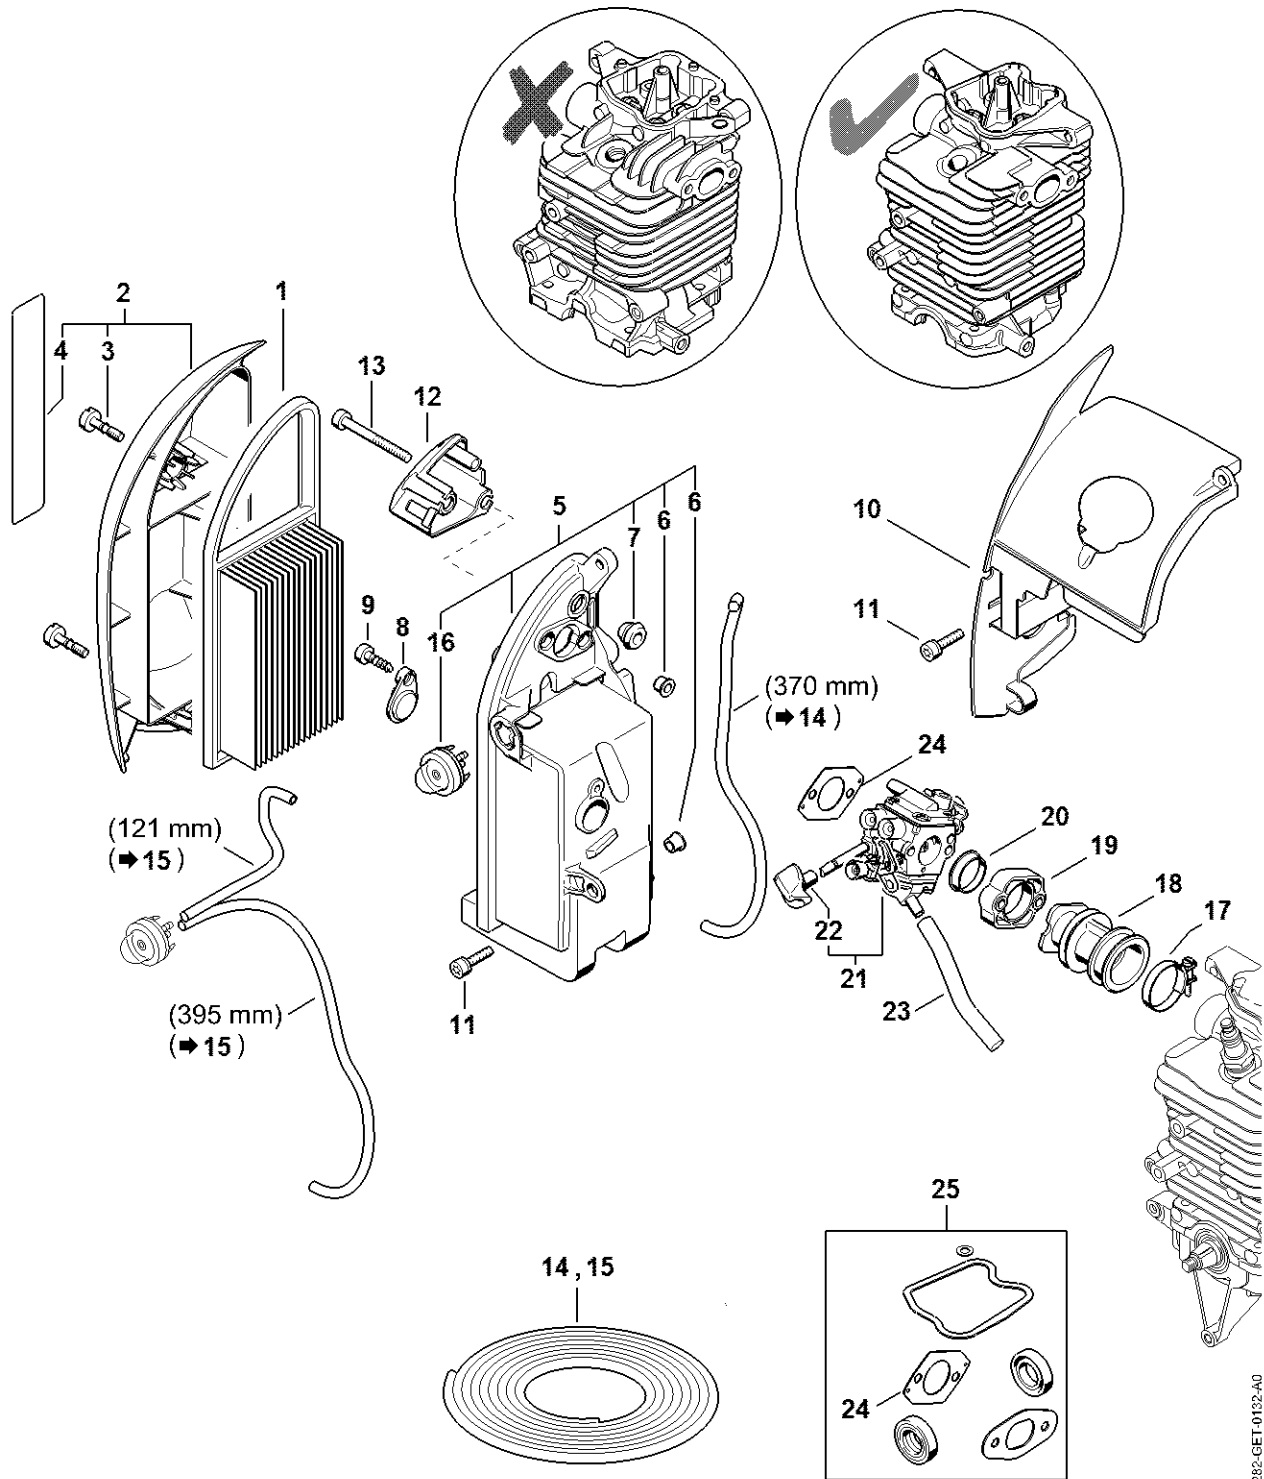


4282-GET-0102-A0

Air filter, Manifold

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 141 0300	Air filter	1		
2	4282 140 1003	Filter cover	1	3, 4	
3	9022 319 1027	Screw IS-M5x21	1		
4	0000 967 7335	Warning pictogram BR	1		
5	4282 140 2851	Filter housing	1	6, 7, 16	
6	0000 963 0809	Bushing	3		
7	4134 123 7500	Grommet	1		
8	4282 141 2900	Cover	1		
9	9074 477 4132	Pan head self-tapping screw IS-P5x18	1		
10	4282 087 3001	Air guide shroud	1		
11	9075 478 4159	Pan head self-tapping screw IS-D5x24	2		
12	4282 121 6900	Baffle	1		
13	9022 341 1220	Spline screw IS-M5x48	2		
14	0000 937 5004	Hose 3.1x5.7 mm x 1 m, R5	1		
15	0000 930 2802	Hose 2.2x5.4 mm x 1 m, R1	1		
16	0000 350 6202	Fuel pump	1		
17	9771 021 2536	Hose clip 30x5	1		
18	4282 141 2200	Manifold	1		
19	4282 120 2200	Flange	1		
20	1113 141 1805	Sleeve	1		
21	4282 120 0611	Carburetor 4282/11	1	22	
22	4282 182 9500	Choke knob	1		
23	4282 141 8600	Impulse hose	1		
24	4283 129 0900	Gasket	1		
25	4282 007 1010	Set of gaskets	1	24	

Rewind starter

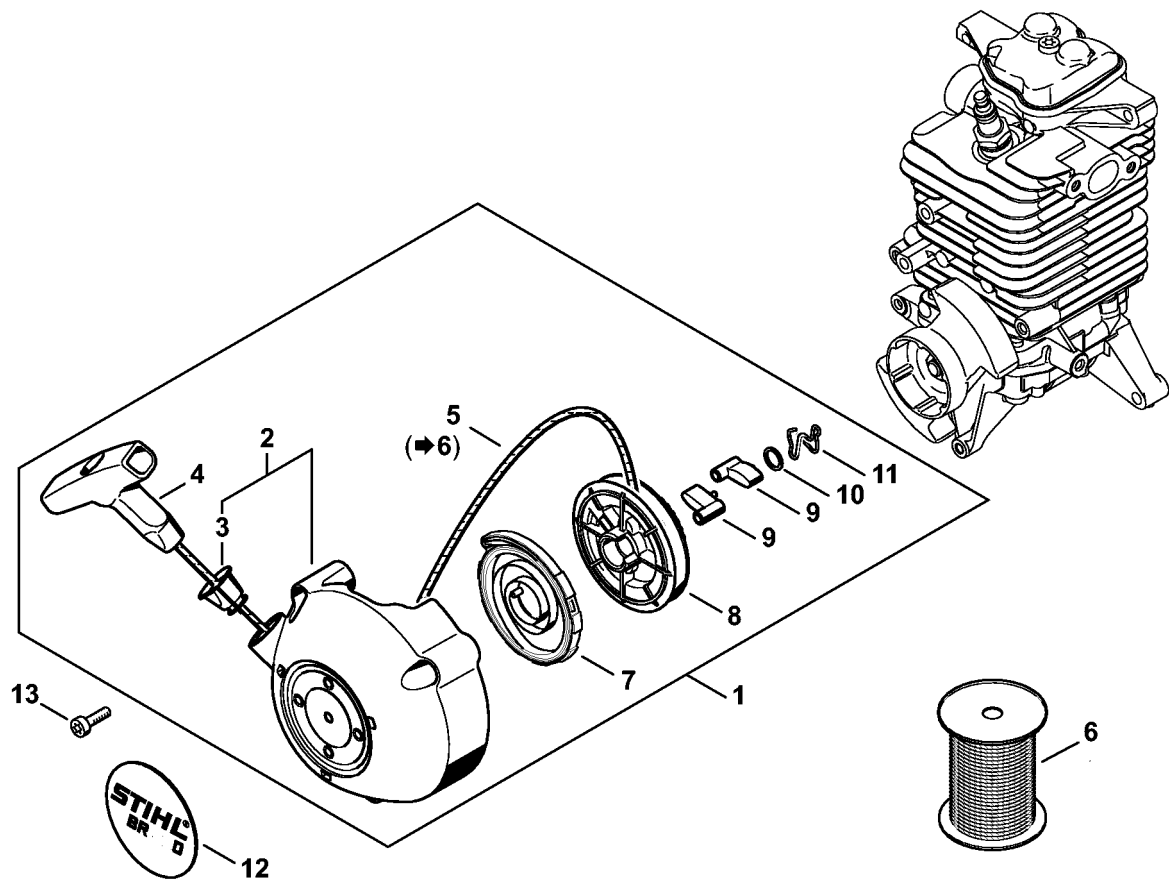


4282-GET-0038-A0

Rewind starter

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 190 0303	Starter cover with rewind starter	1	2 - 5, 7 - 11	
2	4282 190 0400	Starter cover	1	3	
3	1110 084 9102	Bushing	1		
4	1121 195 3400	Starter grip	1		
5	1113 195 8200	Starter rope Ø 3.5x960 mm	1		
6	0000 930 2203	Starter rope Ø 3.5 mm x 30.5 m	1		
6	0000 930 2212	Starter rope Ø 3.5 mm x 60.8 m	1		
7	4282 190 0600	Rewind spring	1		
8	4119 195 0400	Rope rotor	1		
9	4116 195 7200	Pawl	2		
10	0000 958 0923	Washer	1		
11	1128 195 3500	Spring	1		
12	4282 967 1503	Model plate BR 700	1		
13	9022 341 1010	Spline screw IS-M5x18	3		

Carburetor 4282/13

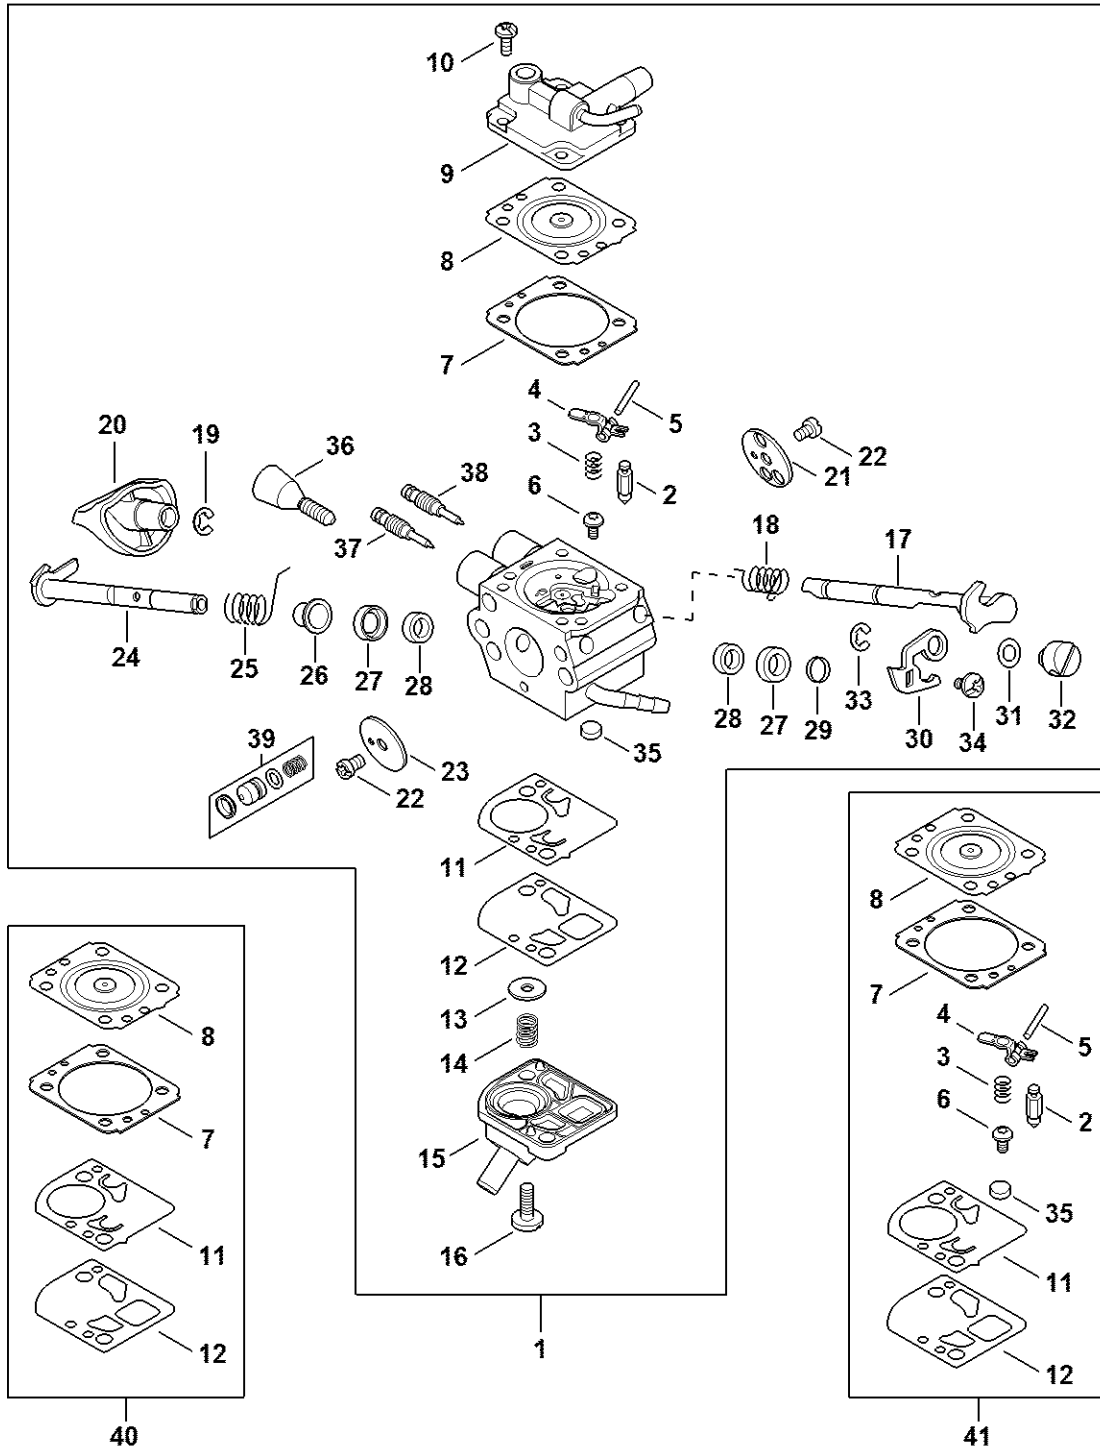

4282-GET-0109-A0


Carburetor 4282/13

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 120 0613	Carburetor 4282/13	1	2 - 39	
2	Z000 018 Z000	Inlet needle	1		
3	1120 122 3004	Spring	1		
4	4229 121 5000	Inlet control lever	1		
5	1120 121 9200	Spindle	1		
6	0000 122 7101	Screw	1		
7	4134 129 0905	Gasket	1		
8	4134 121 4702	Metering diaphragm	1		
9	Z010 028 A001	Metering cover assy	1		
10	1120 122 6601	Collar screw	4		
11	4180 121 4802	Pump diaphragm	1		
12	4180 129 0908	Pump gasket	1		
13	4180 121 8602	Washer	1		
14	4180 122 3006	Spring	1		
15	4180 121 0803	End cover	1		
16	4242 122 7100	Screw	2		
17	Z010 041 A004	Choke shaft assy	1		
18	4282 122 3005	Spring	1		
19	4282 122 9000	E-clip	1		
20	Z010 042 Z008	Choke lever	1		
21	4282 121 2900	Choke shutter	1		
22	1125 122 7403	Round head screw	2		
23	4282 121 3300	Throttle shutter	1		
24	4283 120 7100	Throttle shaft with lever	1		
25	4283 122 3000	Spring	1		
26	4283 122 9100	Bushing	1		
27	4238 121 9400	Ring	2		

Carburetor 4282/13

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
28	4238 122 3600	Sealing ring	2		
29	4282 122 5000	Spacer sleeve	1		
30	4282 121 3500	Throttle lever	1		
31	4137 121 8600	Washer	1		
32	4128 121 8901	Pin	1		
33	1120 122 9000	E-clip	1		
34	9079 319 0280	Flat head screw M3x3.5	1		
35	1123 121 7800	Strainer	1		
36	4180 122 6202	Idle speed screw	1		
37	4282 122 6801	Low speed screw	1		
38	4282 122 6707	High speed screw	1		
39	4283 120 9700	Pump piston kit	1		
40	4283 007 1700	Set of carburetor parts	1	7, 8, 11, 12	
41	Z000 001 K106	Carburetor Repair Kit RB-300	1	2 - 5, 7, 8, 11, 12, 35	

Carburetor 4282/11

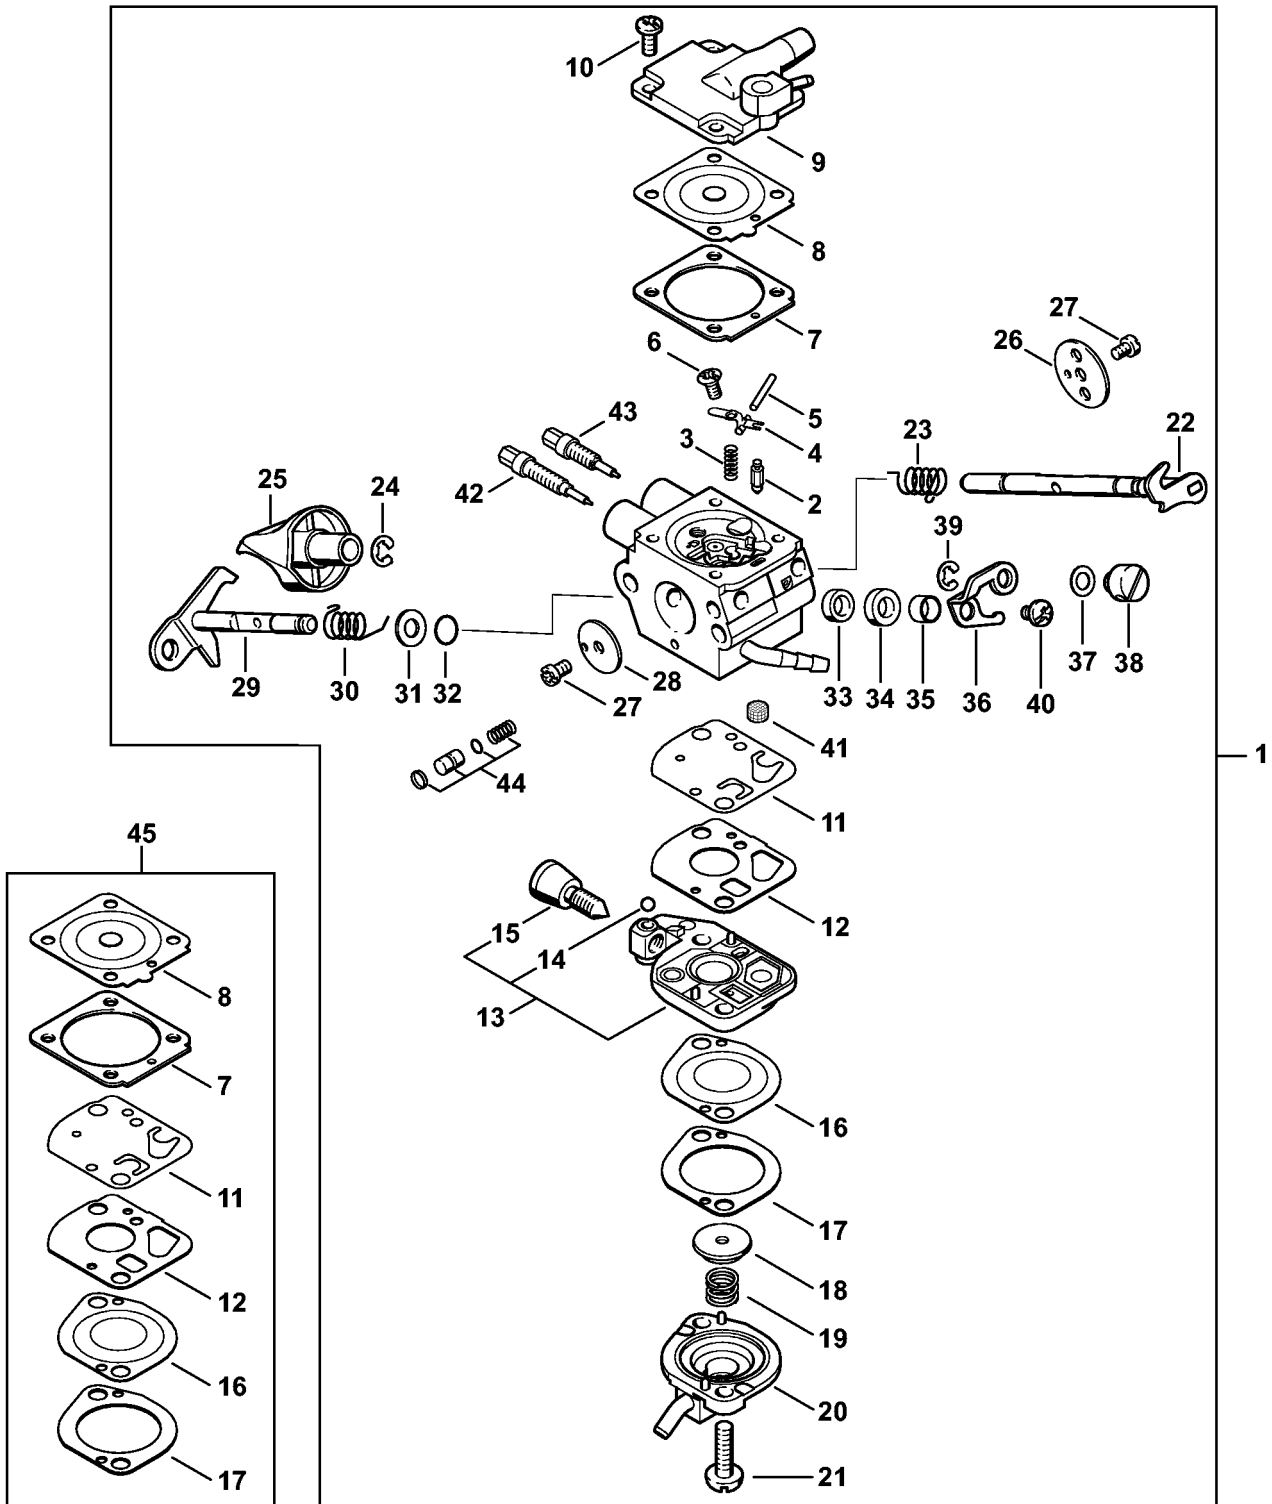

4282-GET-0038-A0


Carburetor 4282/11

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 120 0611	Carburetor 4282/11	1	2 - 44	
2	Z000 018 Z000	Inlet needle	1		
3	1120 122 3004	Spring	1		
4	1125 121 5000	Inlet control lever	1		
5	1120 121 9200	Spindle	1		
6	1120 122 6600	Collar screw	1		
7	4229 129 0901	Metering gasket	1		
8	4229 121 4700	Metering diaphragm	1		
9	4282 121 0800	End cover	1		
10	1120 122 6601	Collar screw	4		
11	4180 121 4800	Pump diaphragm	1		
12	4180 129 0901	Pump gasket	1		
13	4180 120 2601	Pump cover	1	14, 15	
14	1125 122 4200	Clamp	1		
15	4180 122 6200	Idle speed screw	1		
16	4180 121 4801	Pump diaphragm	1		
17	4180 129 0903	Pump gasket	1		
18	4180 121 8600	Washer	1		
19	4180 122 3001	Spring	1		
20	4180 121 0801	End cover	1		
21	4180 122 7101	Screw	2		
22	4282 121 3000	Choke shaft	1		
23	4282 122 3005	Spring	1		
24	4282 122 9000	E-clip	1		
25	4282 182 9500	Choke knob	1		
26	4282 121 2900	Choke shutter	1		
27	1125 122 7403	Round head screw	2		

Carburetor 4282/11

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
28	4282 121 3300	Throttle shutter	1		
29	4282 120 7100	Throttle shaft with lever	1		
30	4282 122 3004	Spring	1		
31	4180 121 8601	Washer	1		
32	4180 122 3601	Sealing ring	1		
33	4238 122 3600	Sealing ring	1		
34	4238 121 9400	Ring	1		
35	4282 122 5000	Spacer sleeve	1		
36	4282 121 3500	Throttle lever	1		
37	4137 121 8600	Washer	1		
38	4128 121 8901	Pin	1		
39	1120 122 9000	E-clip	1		
40	9079 319 0280	Flat head screw M3x3.5	1		
41	1120 121 7800	Strainer	1		
42	Z000 031 Z089	Low speed screw	1		
43	4282 122 6706	High speed screw	1		
44	4282 120 9701	Pump piston kit	1		
45	4282 007 1700	Set of carburetor parts	1	7, 8, 11, 12, 16, 17	

Fan housing, Shroud

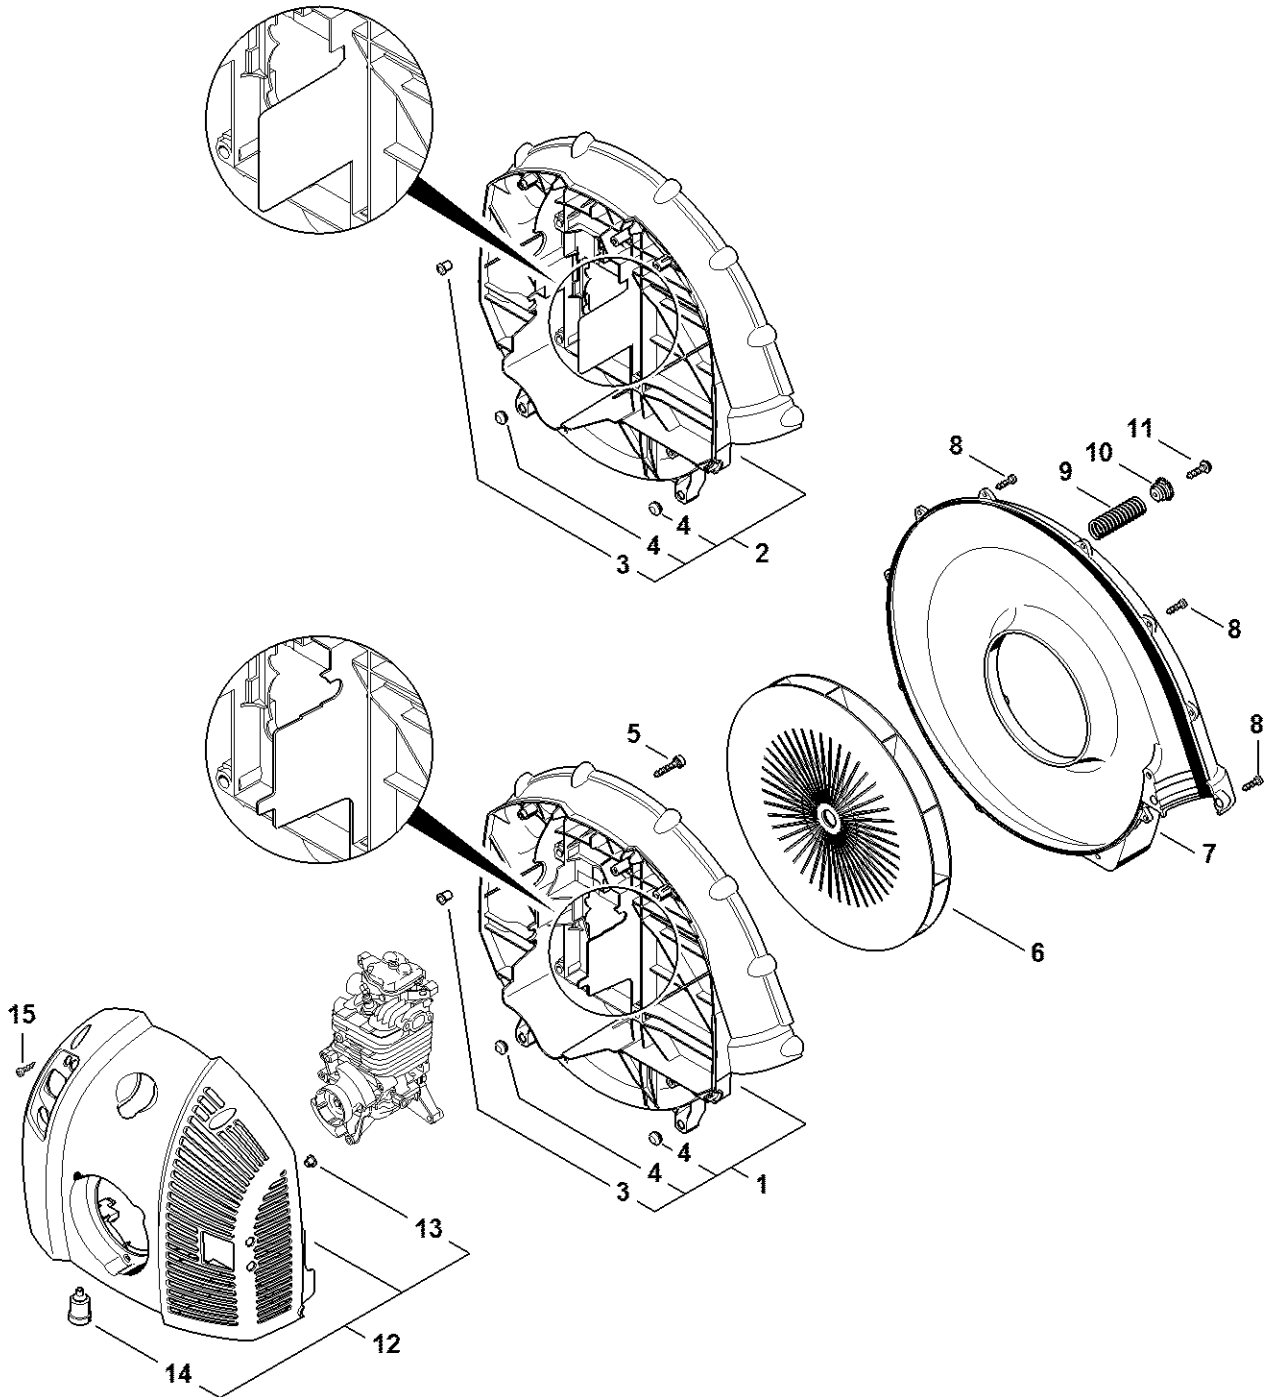


4282-GET-0128-A0

Fan housing, Shroud

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 700 4107	Fan housing	1	3, 4	
2	4282 700 4104	Fan housing, inside	1	3, 4	
3	0000 963 0900	Bushing	4		
4	1121 791 2800	Stop buffer	2		
5	9075 478 4718	Pan head self-tapping screw IS-D6x32	4		
6	4282 700 3405	Fanwheel	1		
7	4282 701 0702	Fan housing, outer	1		
8	9074 477 4132	Pan head self-tapping screw IS-P5x18	12		
9	4282 791 3100	Spring	4		
10	4282 792 2900	AV mount	4		
11	9074 478 4140	Pan head self-tapping screw IS-P6x25	4		
12	4282 700 2102	Shroud	1	13, 14	
13	9991 003 5087	Sleeve 7.5x6.8	3		
14	4282 791 5902	Stop buffer	2		
15	9074 477 4132	Pan head self-tapping screw IS-P5x18	4		

Fuel tank, Backplate

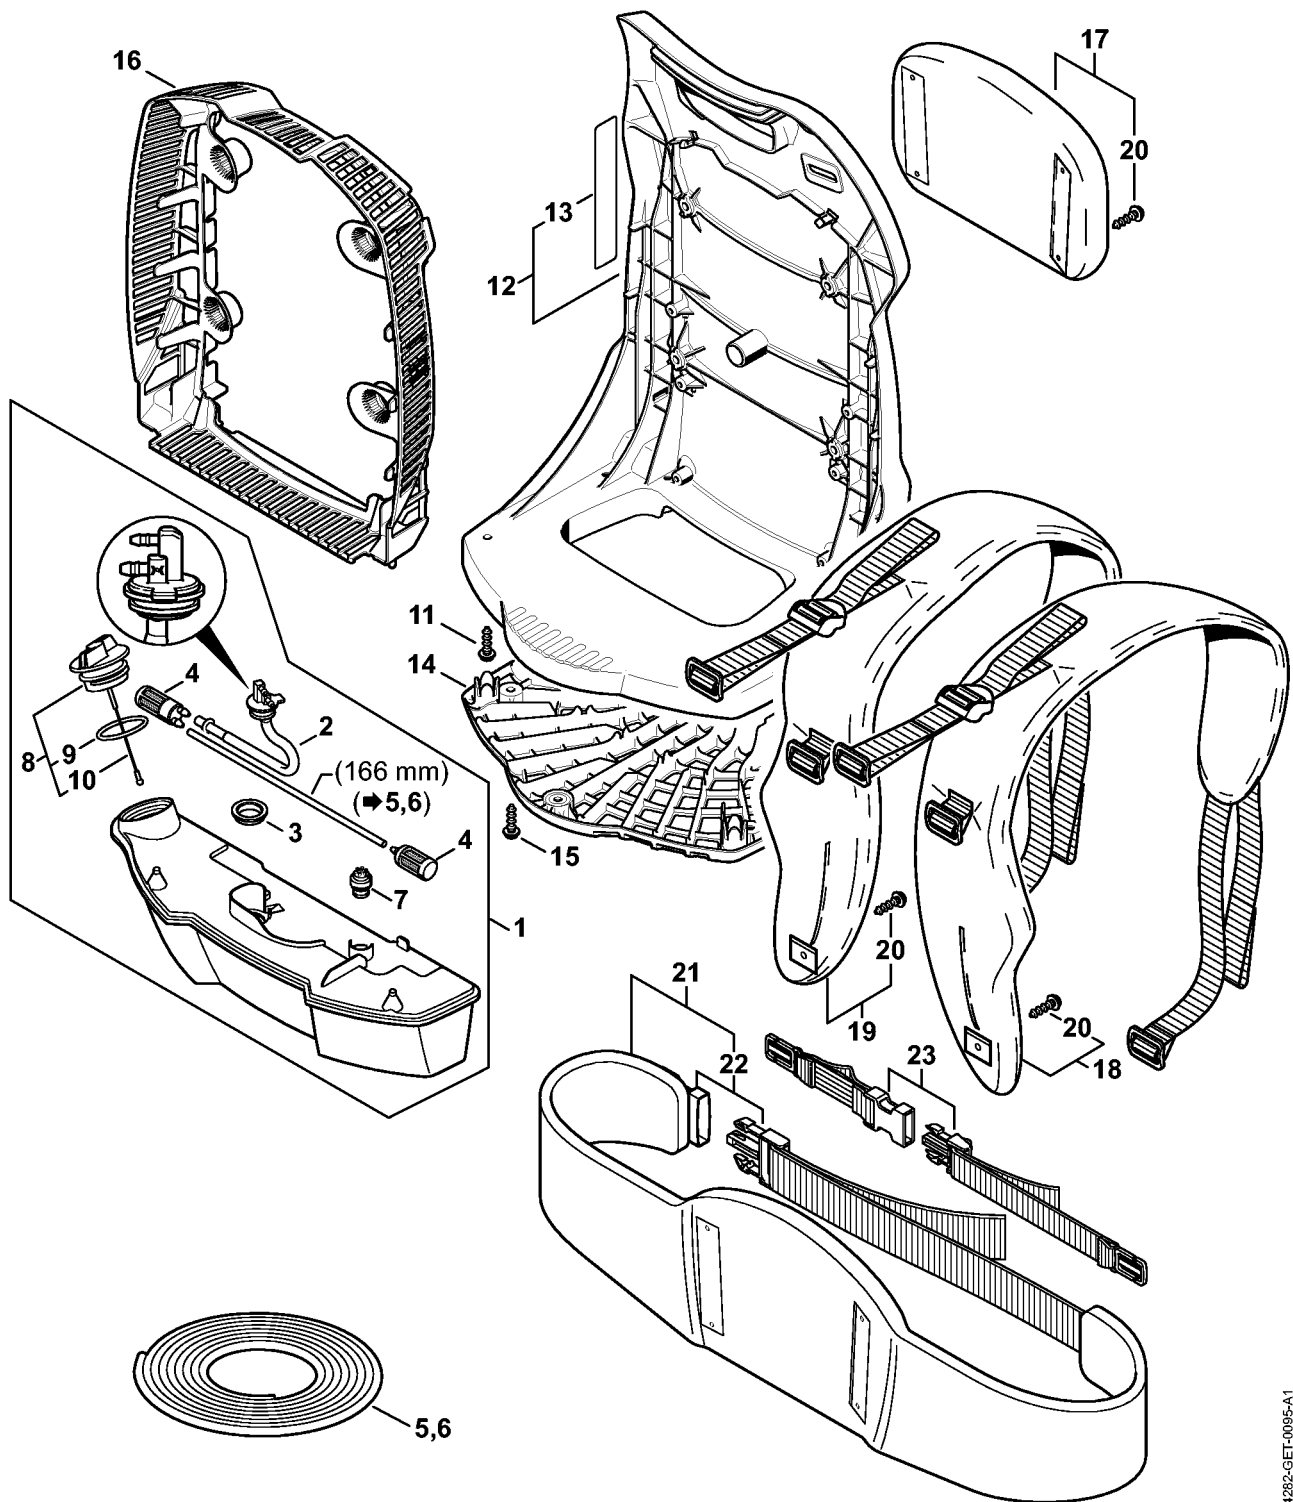


4282-GET-0095-A1

Fuel tank, Backplate

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 350 0407	Fuel tank	1	2 - 4, 7 - 10	
2	4282 350 1402	Connector	1		
3	4238 353 9200	Grommet	1		
4	4282 007 3600	Set of pickup bodies	1		
5	0000 930 2803	Hose 3.1x5.7 mm x 1 m, R3	1		
6	0712 923 8004	Hose 3.1x5.7 mm x 10 m, R3	1		
7	0000 350 5800	Tank vent	1		
8	0000 350 0527	Filler cap	1	9, 10	
9	9645 951 3890	O-ring 35x3-FPM 80	1		
10	0000 350 0900	Rope	1		
11	9074 478 4140	Pan head self-tapping screw IS-P6x25	2		
12	4282 700 3805	Back plate	1	13	
13	0000 967 7335	Warning pictogram BR	1		
14	4282 798 2200	Base plate	1		
15	9074 478 4140	Pan head self-tapping screw IS-P6x25	5		
16	4282 760 8101	Protective screen	1		
17	4282 790 8001	Back rest pad	1	20	
18	4282 710 9020	Harness, right	1	20	
19	4282 710 9030	Harness, left	1	20	
20	0000 951 1105	Pan head self-tapping screw IS-P5x14	6		
21	4282 710 9101	Lap belt	1	22	
22	4134 710 6401	Buckle	1		
23	0000 790 7700	Chest strap	1		

Pleated hose, Blower tube BR 700

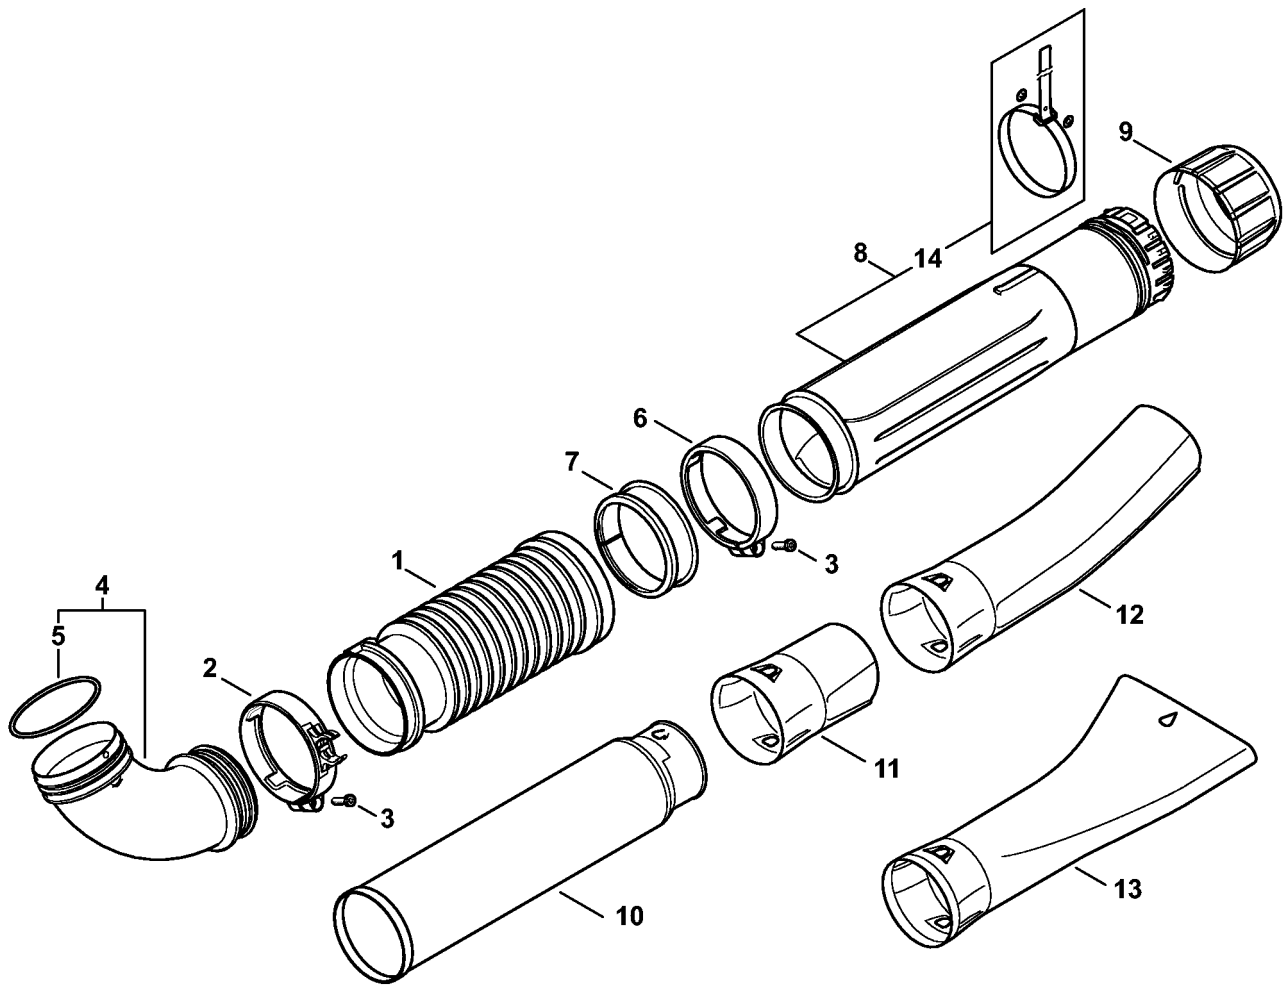


4282-GET-0097-A0

Pleated hose, Blower tube BR 700

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 701 6102	Pleated hose	1		
2	4282 708 8704	Hose clip	1		
3	9074 478 4143	Pan head self-tapping screw IS-P6x26	2		
4	4282 700 6901	Elbow	1	5	
5	9645 945 8821	O-ring 104,37x3,53	1		
6	4282 708 8703	Hose clip	1		
7	4282 701 6301	Slip ring	1		
8	4282 700 1810	Blower tube	1	14	
9	4282 708 3101	Union nut	1		
10	4282 701 5408	Blower tube	1		
11	4282 708 6302	Round nozzle straight	1		
12	4282 708 6303	Round nozzle curved	1		
13	4282 708 6304	Flat nozzle curved	1		
14	4282 701 9305	Cling strip	1		

Control handle

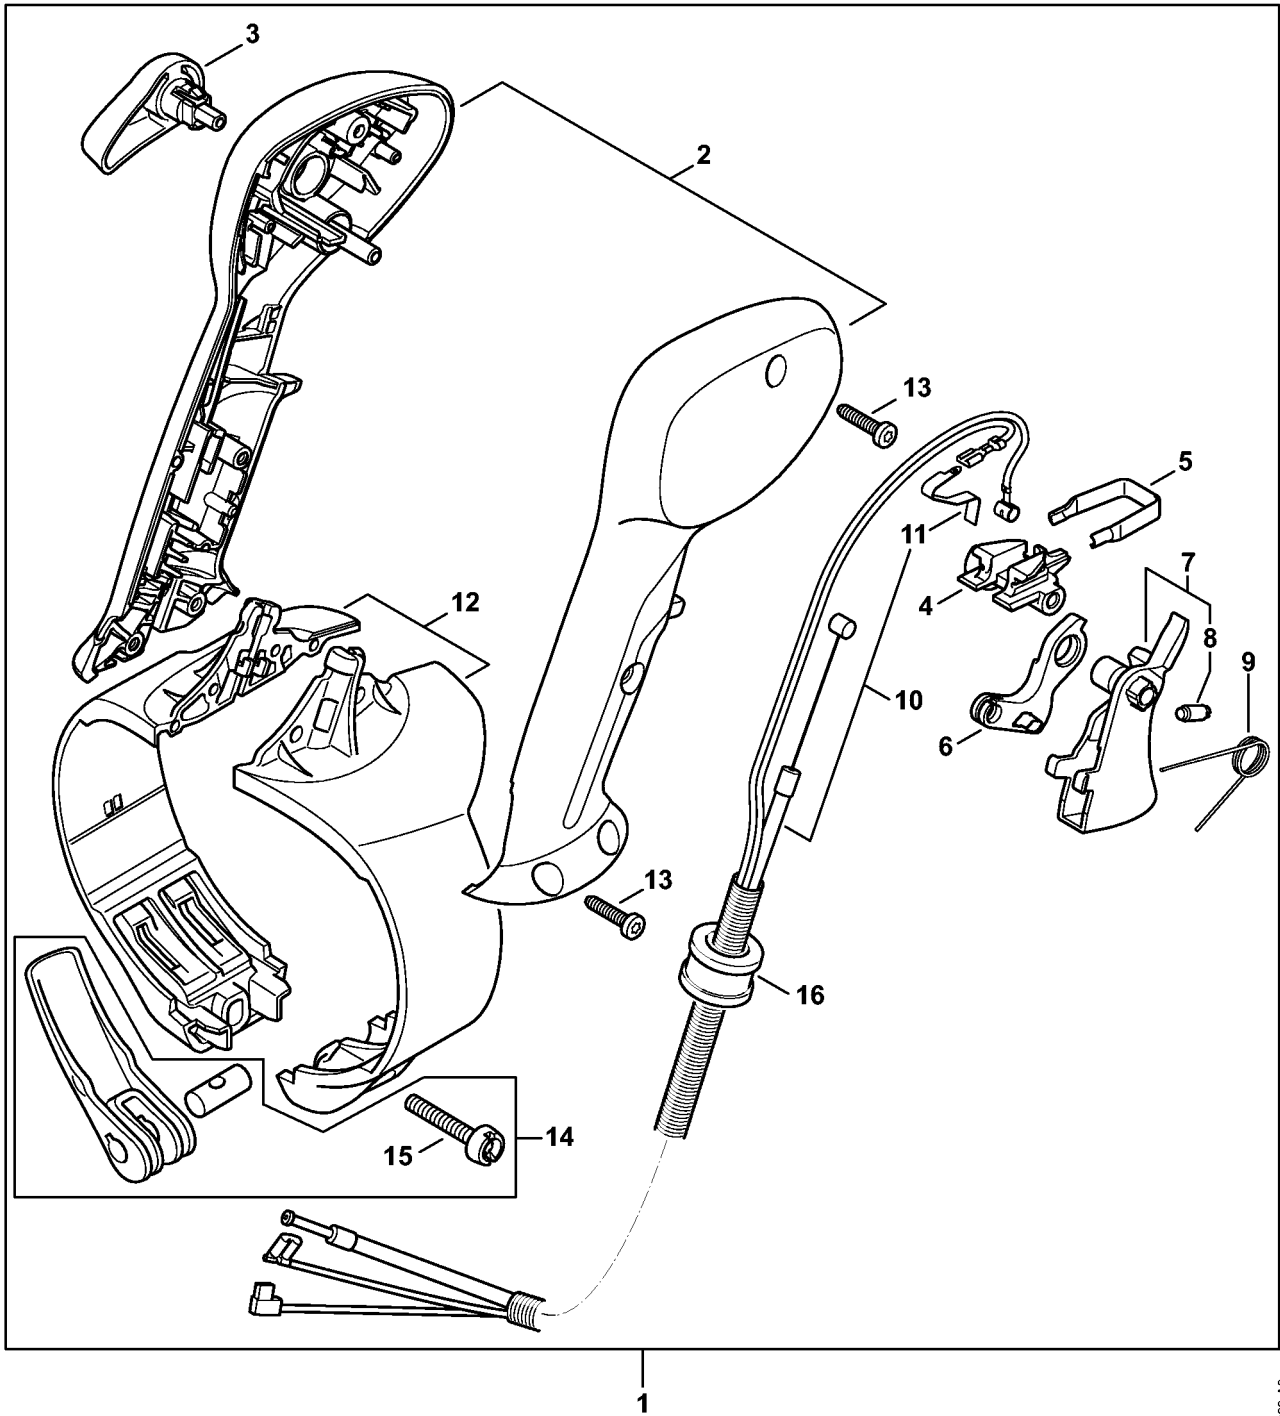


4282-GET-0099-A0

Control handle

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 790 4901	Control handle with throttle cable	1	2 - 16	
2	4282 790 0301	Handle	1		
3	4282 182 2901	Locking lever	1		
4	4241 182 4301	Cam	1		
5	4241 182 4201	Detent spring	1		
6	4244 182 2800	Lever	1		
7	4241 180 1500	Throttle trigger	1	8	
8	0000 953 0808	Stud	1		
9	4241 182 4502	Torsion spring	1		
10	4282 180 1107	Throttle cable	1	11	
11	4282 442 1603	Contact spring	1		
12	4282 790 0700	Clamp shell	1		
13	9074 478 3075	Pan head self-tapping screw IS-P4x19	4		
14	4282 740 5300	Clamping lever	1	15	
15	4227 701 5000	Screw M5x32	1		
16	4282 182 7802	Sleeve	1		


Bike handle

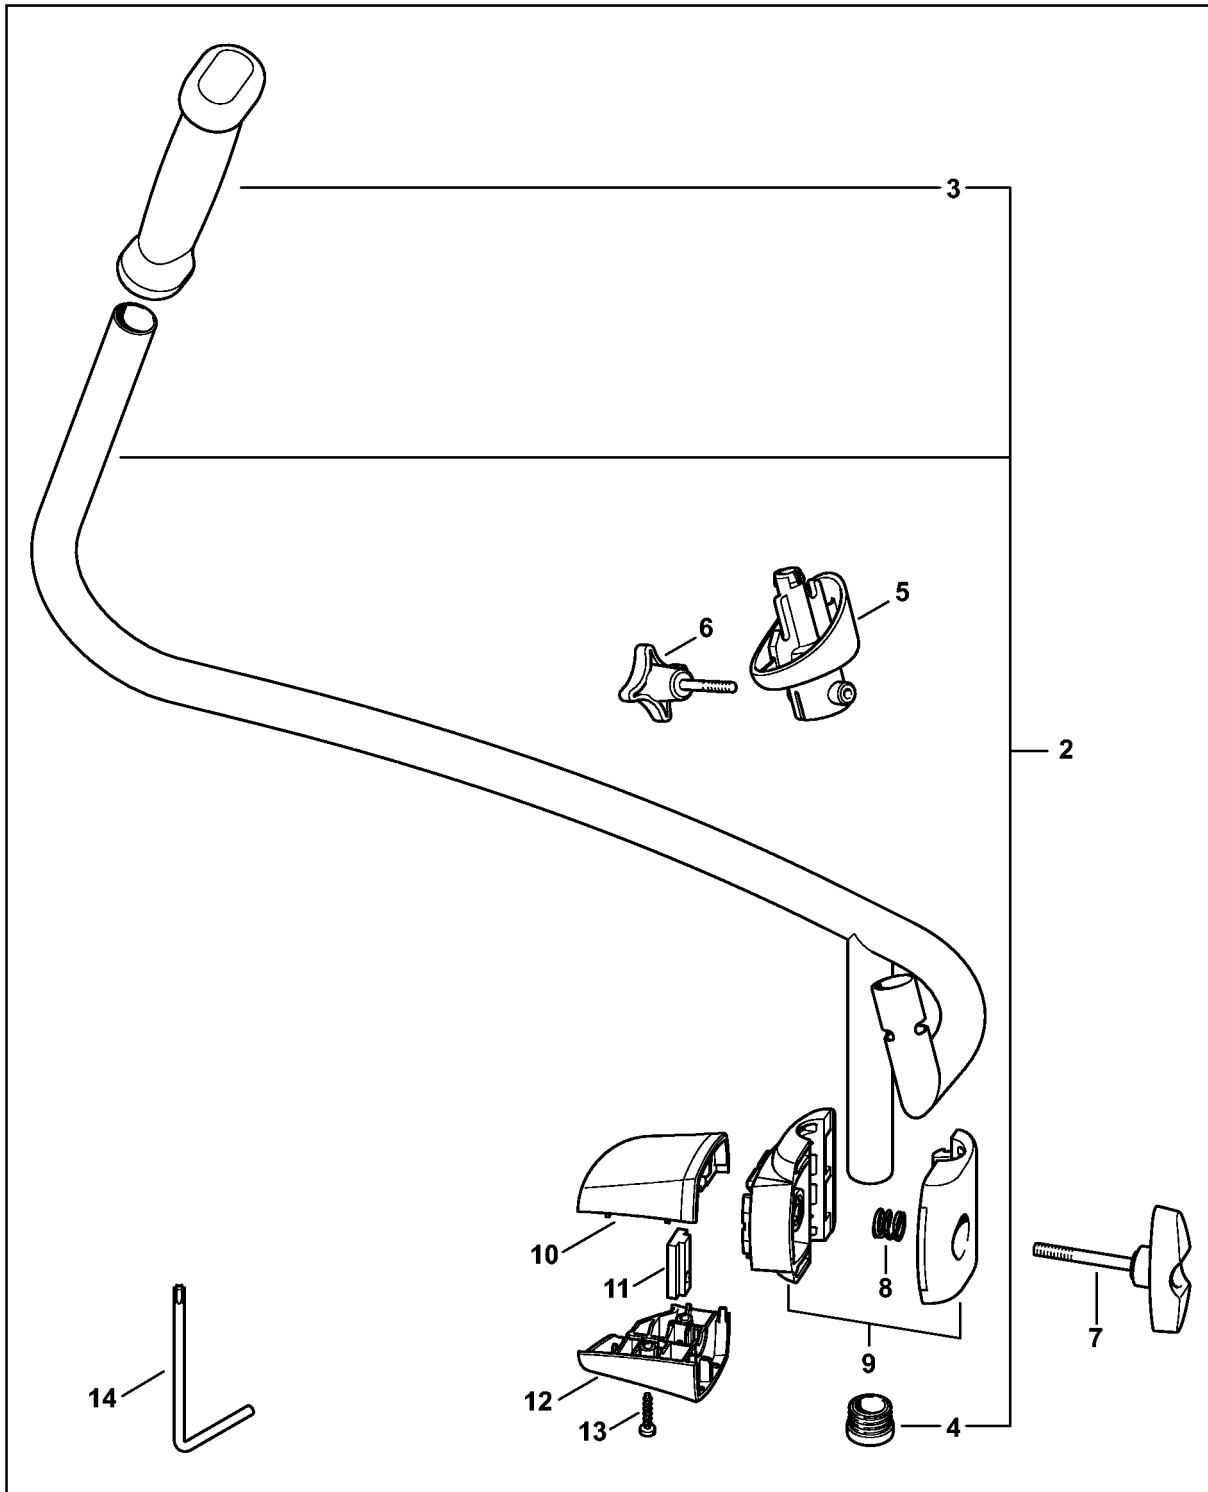

4282-GET-0050-A0

Bike handle

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4282 790 1700	Handlebar	1	2 - 14	
2	4282 790 1701	Handlebar	1	3, 4	
3	4128 791 0300	Handle, left	1		
4	4282 791 7300	Plug	1		
5	4282 700 1200	Connecting piece	1		
6	4282 710 9300	Wing screw	1		
7	4128 790 7501	Tommy screw	1		
8	0000 997 1304	Compression spring	1		
9	4128 790 4800	Clamp	1		
10	4282 791 0900	Clamp	1		
11	4128 791 9800	Square nut	1		
12	4282 791 0901	Clamp	1		
13	9074 478 3075	Pan head self-tapping screw IS-P4x19	2		
14	0812 370 1143	Screwdriver T20x100x50	1		

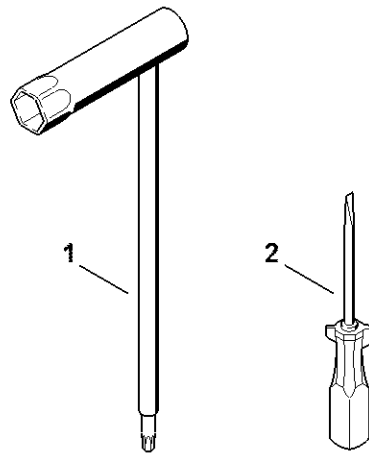


4282-GET-019-A0

Tools, Extras

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	4180 890 3400	Combination wrench	1		
2	0000 890 2300	Screwdriver	1		

Serial number

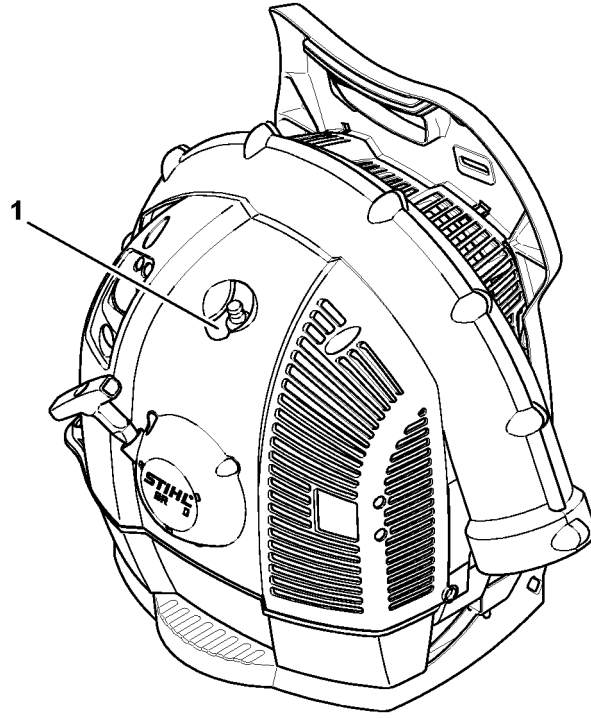


4282-GET-0053-A0

Serial number

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1		Position of serial number	1		


Smart Connector

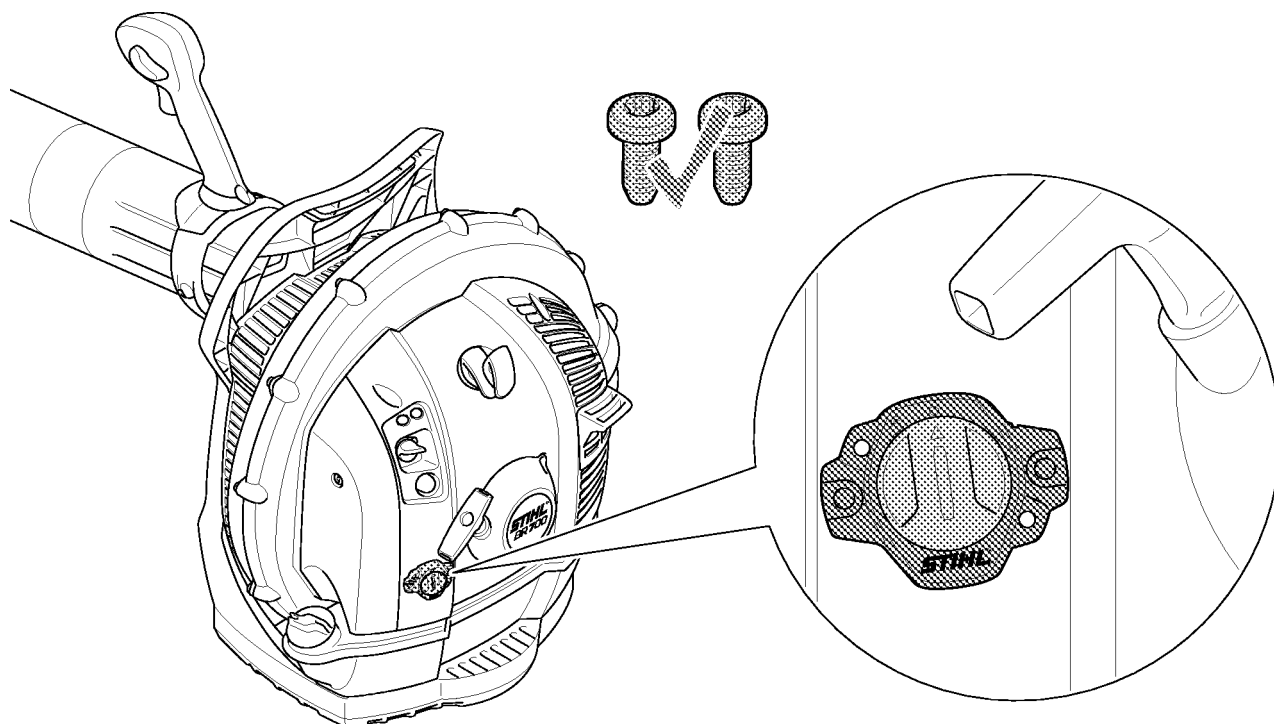

Smart Connector

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
		Position of Smart Connector	1		

Miscellaneous lubricants and greases

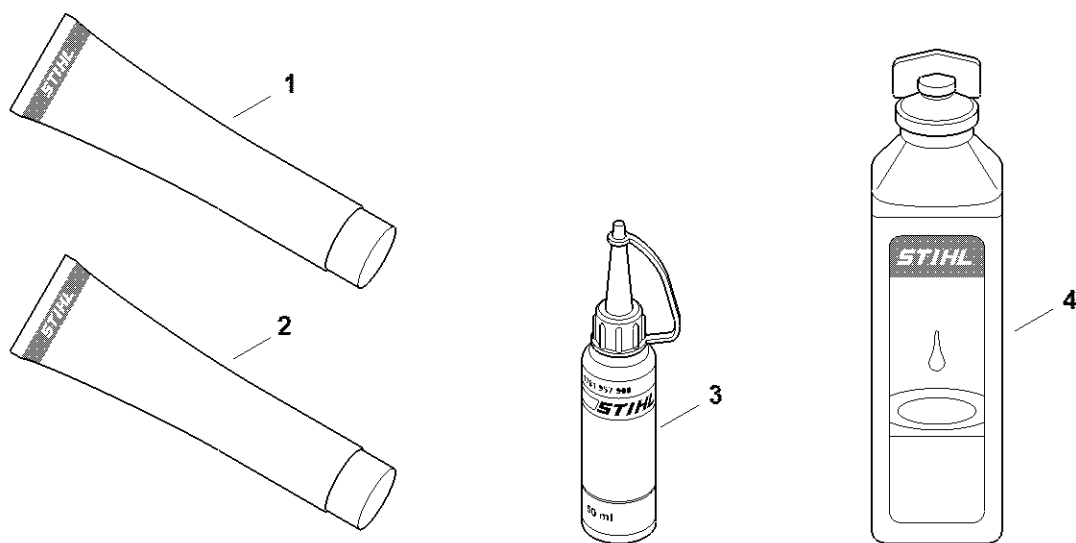


0000-GET-0189-A0

Miscellaneous lubricants and greases

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	0781 120 1021	STIHL Multilub 40g tube	1		
1	0781 120 1109	Multipurpose grease 80 g	1		
1	0781 120 1110	Multipurpose grease 225 g	1		
2	0783 830 2000	Tube of sealant HT red	1		
3	0781 957 9000	Press fluid OH 723	1		
4	0781 319 8401	HP 100ml	1		
4	0781 319 8052	HP Super 100ml	1		
4	0781 319 8060	HP Ultra 100ml	1		

Cleaning products

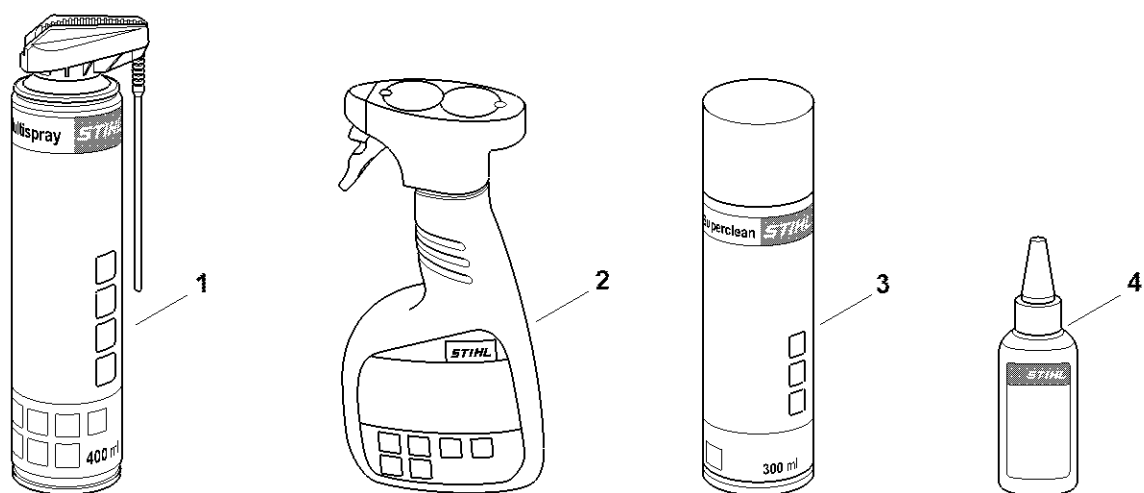


0000-GET-0171-A0

Cleaning products

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	0730 411 7002	Multispray 50 ml	1		
1	0730 411 7000	Multispray	1		
2	0000 881 9400	VarioClean 500 ml	1		
2	0000 881 9409	Special cleaner 5 l	1		
3	0782 516 8500	Multioil Bio 50 ml	1		

Nipple




901SW008 GM

Nipple

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	0000 855 9200	Nipple	1		

Assembly drift




901SW023 GM

Assembly drift

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	1108 893 4700	Assembly drift	1		

Press sleeve

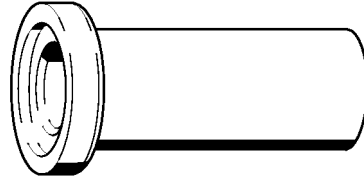

901 SW025 GM

Press sleeve

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	1108 893 2405	Press sleeve	1		

Installing sleeve



901SW061 GM

Installing sleeve

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	1118 893 4602	Installing sleeve	1		

Sealing plate



901 SW078 GM

Sealing plate

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	0000 855 8106	Sealing plate	1		

Hose 135 mm / 5 5/16"




901SW100 GM

Hose 135 mm / 5 5/16"

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	1110 141 8600	Hose 135 mm / 5 5/16"	1		

Test flange

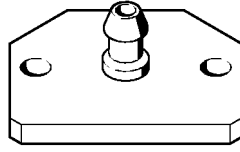


901SW117 GM

Test flange

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	1119 850 4201	Test flange	1		

Setting gauge

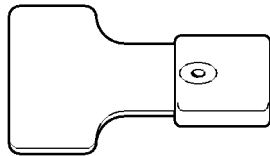


901SW163 GM

Setting gauge

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	4118 890 6401	Setting gauge	1		

Socket, 13 mm



901SW217 GM

Socket, 13 mm

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 893 5608	Socket, 13 mm	1		

Socket, 17 mm



901SW218 GM

Socket, 17 mm

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 893 5610	Socket, 17 mm	1		

Assembly hook




901SW221 GM

Assembly hook

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 893 8800	Assembly hook	1		

Ignition system tester, ZAT 3

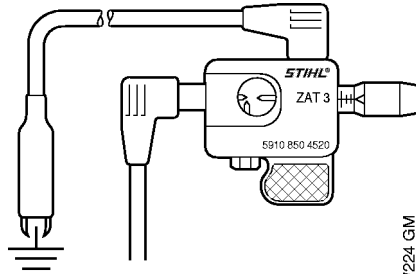


901 SW224 GM

Ignition system tester, ZAT 3

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 850 4520	Ignition system tester, ZAT 3	1		


Ignition system tester, ZAT 4

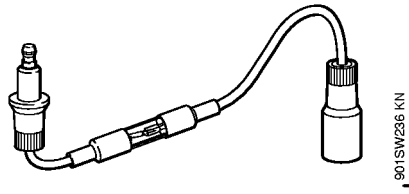

Ignition system tester, ZAT 4

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 850 4503	Ignition system tester, ZAT 4	1		

Compression tester

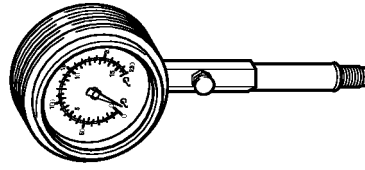


901SW243 KN

Compression tester

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 850 2000	Compression tester	1		

Setting gauge




901SW244 KN

Setting gauge

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	4180 893 6400	Setting gauge	1		

Locking screw




901SW264 KN

Locking screw

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	4282 890 2700	Locking screw	1		

Sleeve

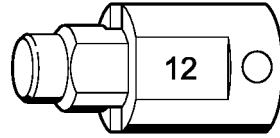


9015W283 KN

Sleeve

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 893 1706	Sleeve	1		


Installing tool, 12

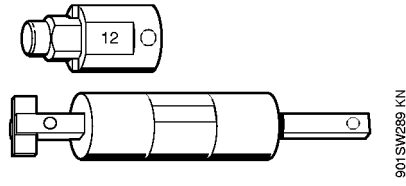

Installing tool, 12

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 890 2212	Installing tool, 12	1		
	5910 893 1706	Sleeve	1		

Torque wrench with optical/acoustic signal

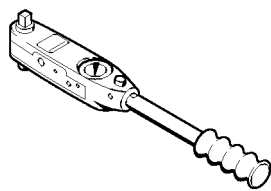


901SW290 KN

Torque wrench with optical/acoustic signal

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 890 0312	Torque wrench with optical/acoustic signal	1		

Torque wrench

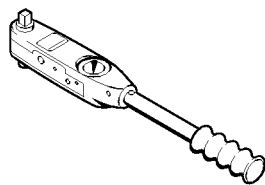


901SW291 KN

Torque wrench

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 890 0311	Torque wrench	1		

Torque wrench with optical/acoustic signal

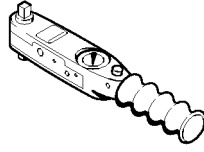


901SW292 KN

Torque wrench with optical/acoustic signal

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
		Torque wrench	1		

Torque wrench

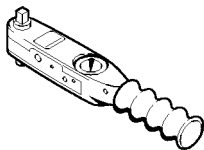


9015W293 KN

Torque wrench

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 890 0301	Torque wrench	1		

Jaw (profile No. 3.1 and 4)



901 SW932 GIM

Jaw (profile No. 3.1 and 4)

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	0000 893 3706	Jaw (profile No. 3.1 and 4)	1		

Sleeve




901 SW840 GIM

Sleeve

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 893 1702	Sleeve	1		

Puller

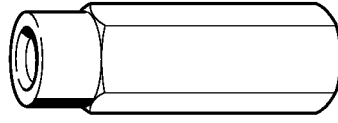


9015W385 KN

Puller

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 893 0801	Puller	1		


Puller

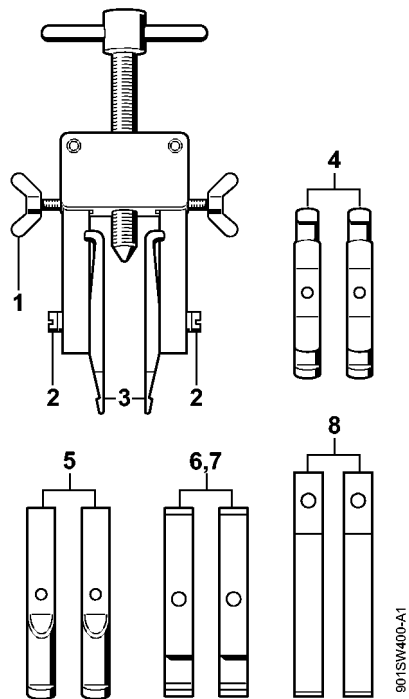

Puller

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 890 4400	Puller	1	1 - 8	
1	9157 691 0980	Wing screw M5x16	2		
2	9044 319 0980	Pan head screw M5x16	2		
3	0000 893 3700	Jaw (profile No. 1 and 2)	2		
4	0000 893 3706	Jaw (profile No. 3.1 and 4)	2		
5	0000 893 3711	Jaw (profile No. 6)	2		
6	0000 893 3703	Jaw (profile No. 7)	2		
7	0000 893 3704	Jaw (profile No. 8)	2		
8	0000 893 3707	Jaw (profile No. 9)	2		

Screwdriver




901SW438 GM

Screwdriver

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	5910 890 2307	Screwdriver	1		

Nipple




901SW496 GM

Nipple


#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	0000 855 9201	Nipple	1		

Testing tool kit

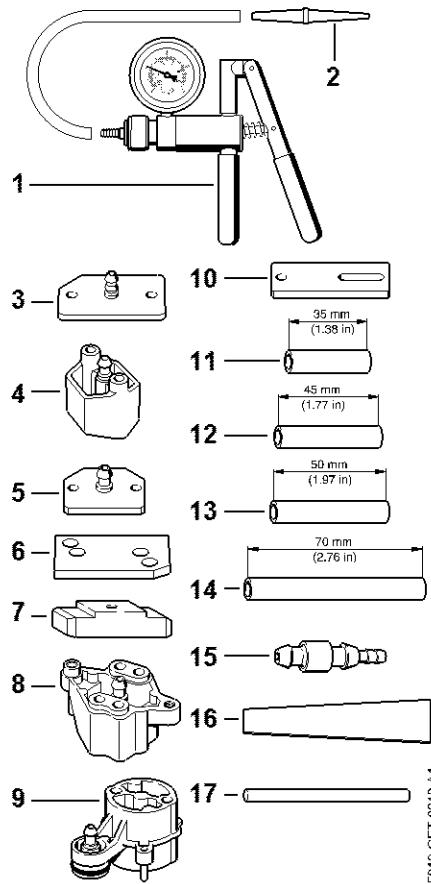

Testing tool kit

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	0000 890 1701	Testing tool kit	1	1 - 17	
1	0000 850 1300	Pump	1	2	
2	0000 855 9201	Nipple	1		
3	1106 850 4201	Flange	1		
4	1118 850 4200	Flange	1		
5	1119 850 4201	Test flange	1		
6	1123 855 4200	Flange	1		
7	1124 850 4205	Flange	1		
8	5910 850 4207	Flange	1		
9	4224 890 1200	Flange	1		
10	5910 855 4206	Flange	1		
11	5910 893 1702	Sleeve	2		
12	1123 851 8300	Sleeve	2		
13	1124 893 7100	Sleeve	2		
14	1127 851 8300	Sleeve	2		
15	0000 855 9200	Nipple	1		
16	0000 855 8106	Sealing plate	1		
17	1110 141 8600	Hose 135 mm / 5 5/16"	1		

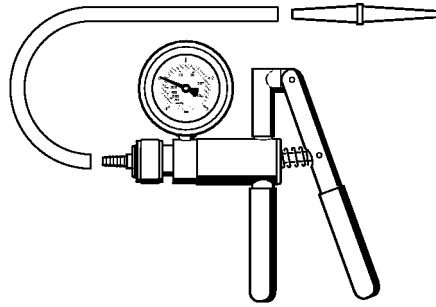


901SW486 GM

Pump

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	0000 850 1300	Pump	1		
	0000 855 9201	Nipple	1		
	0000 855 0100	Hose	1		


Leakage tester kit

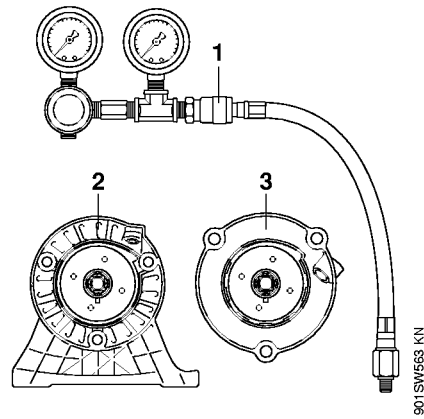

Leakage tester kit

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
1	5910 007 1000	Leakage tester kit	1	2, 3	
2	5910 850 0300	Leakage tester	1		
3	4180 890 8601	Support	1		
4	4180 890 8600	Flywheel blocking tool	1		
5	4282 890 8600	Flywheel blocking tool	1		
6	5910 890 8602	Flywheel blocking tool	1		

Screwdriver, T27x200

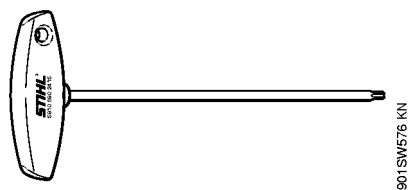

Screwdriver, T27x200

#	Part Number	Description	Quantity	Contains Item(s)	Remarks
	5910 890 2415	Screwdriver, T27x200	1		